HF-A11

Embedded WiFi Module User Manual

V4.5

Overview of Characteristic

- ♦ Support IEEE802.11b/g/n Wireless Standards
- ♦ Support TCP/IP/UDP Network Protocols
- Support UART/GPIO/Ethernet Data Interface
- ♦ Support Work As STA/AP/AP+STA Mode
- ♦ Support Router/Bridge Mode Networking
- ♦ Support Internal/External Antenna Option
- ♦ Support Max TCP links: 32
- ♦ Support AT+ Instruction Set for Configuration
- ♦ Support Friendly Web Configuration Page
- ♦ Support Palmodic Signal
- ♦ Support UART Free/Auto-Frame Function
- ♦ Support Smart Link Application Tools
- ♦ Single +3.3V Power Supply
- ♦ Small Size: 25 x 40mm
- ♦ FCC/CE Certificated
- ♦ Flexible Software Platform for customization





CE F©



TABLE OF CONTENTS

1. PROD	JCT OVERVIEW	. 7
1.1. Gei	neral Specification	. 7
1.2. Har	dware Introduction	. 8
1.2.1.	Pins Definition	. 8
1.2.2.	Mechanical Size	. 9
1.2.3.	On-board Chip Antenna	10
1.2.4.	External Antenna	10
1.2.5.	Evaluation Kit	11
1.2.6.	Order Information	12
1.3. Har	dware Reference Design	13
1.3.1.	Hardware Typical Application	13
1.3.2.	10/100M Ethernet Interface	13
1.3.2.1.	Ethernet Connection with Transformer	14
1.3.2.2.	Ethernet Connection without Transformer	14
1.3.3.	UART Interface	14
1.3.4.	Power Interface	15
1.4. Sof	tware Reference Design	16
1.4.1.	Transparent Transmission Mode	16
1.4.2.	Configuration Mode	16
1.4.3.	Multi-TCP Link Connection	17
1.4.4.	TCPB Function	17
1.4.5.	GPIO Function	17
1.4.6.	Palmodic Signal	18
		40
2. FUNC	IONAL DESCRIPTION	10
2.1. VVI	Pasia Wireless Network Read On AR (Infrastructure)	10
2.1.1.	Mireless Network Dased On AD Network	19
2.1.2.	Wireless Network Based On AP Network	19
2.1.3.	wireless Network Daseu Off AF+STA	20
2.2. Aut	O- Flequency Function	21 22
	DT Fromo Sahoma	22
2.4. UA		22
2.4.1.		22
2.4.Z.	UART AUD-Flame	22
2.5. AU	areat Interface Communication	22
2.0. EUI		∠ 3 วว
2.0.1.	HF-A11 Ethernet Interface Networking (As AF)	∠ວ າາ
2.0.2.	HF-A11 Ethernet Interface Networking (As STA, N-Ver)	23 24
2.0.3. 27 Sec	rch Function for STA	24 21
2.7. Sea		24
2.0. WU	work Brotocol	24
2.3. 1981	arameters Configuration	25
2.10. F	arameters connyuration irmwara Ungrada	25
2.11. F	DIC Function	25
2.12. 0		ZJ
3. OPER	ATION GUIDELINE	26
3.1. Co	nfiguration via Web Accessing	26
3.1.1.	Open Web Management Interface	26



3.1.2.	Mode Selection Page	26
3.1.3.	AP Interface Setting Page	27
3.1.4.	STA Interface Setting Page	27
3.1.5.	Application Setting Page	28
3.1.6.	Device Management Page	29
3.2. HF-A	A11 Usage Introduction	29
3.2.1.	Software Debug Tools	29
3.2.2.	Network Connection	29
3.2.3.	Module Debug	30
3.3. Турі	cal Application Examples	32
3.3.1.	Wireless Control Application	32
3.3.2.	Remote Management Application	33
3.3.3.	Transparent Serial Port Application	33
3.3.4.	Wireless Data Acquisition Card Application	34
		35
4.1. Con	figuration Mode	35
4 1 1	Switch to Configuration Mode	35
4.2. AT+	Instruction Set Overview	36
4.2.1.	Instruction Syntax Format	36
4.2.2.	AT+ Instruction Set	37
4.2.2.1.	AT+E	38
4.2.2.2.	AT+ENTM	38
4.2.2.3.	AT+NETP	38
4.2.2.4.	AT+UART	39
4.2.2.5.	AT+ UARTF	39
4.2.2.6.	AT+ UARTFT	40
4.2.2.7.	AT+ UARTFL	40
4.2.2.8.	AT+TMODE	40
4.2.2.9.	AT+WMODE	40
4.2.2.10.	AT+WSKEY	41
4.2.2.11.	AT+WSSSID	41
4.2.2.12.	AT+WSLK	41
4.2.2.13.	AT+WEBU	42
4.2.2.14.	. AT+WAP	42
4.2.2.15.	. AT+WAKEY	42
4.2.2.16.	. AT+HIDESSID	43
4.2.2.17.	. AT+MSLP	43
4.2.2.18.	. AT+WSCAN	43
4.2.2.19.	. AT+ TCPLK	43
4.2.2.20.	AT + TCPDIS	44
4.2.2.21.	. AT+ WANN	44
4.2.2.22	. AT+ LANN	44
4.2.2.23	AT + DHCPDEN	45
4.2.2.24.	AT+ DHCPGW	45
4.2.2.25.	AT+ TCPTO	45
4.2.2.26.	AT+ MAXSK	45
4.2.2.27	AT+TCPB	46
4.2.2.28	AT+TCPPTB	46
4.2.2.29.	. AT+TCPADDB	46



4.2.2.30.	AT+TCPTOB	46
4.2.2.31.	AT+TCPLKB	47
4.2.2.32.	AT+EPHY	47
4.2.2.33.	AT+STTC	47
4.2.2.34.	AT+DOMAIN	47
4.2.2.35.	AT+FRLDEN	47
4.2.2.36.	AT+RELD	48
4.2.2.37.	AT+Z	48
4.2.2.38.	AT+MID	48
4.2.2.39.	AT+WRMID	48
4.2.2.40.	AT+VER	48
4.2.2.41.	AT+H	48
4.2.2.42.	AT+FVEW	49
4.2.2.43.	AT+FVER	49
4.2.2.44.	AT+WMAC	49
4.2.2.45.	AT+PING	49
5 PACKAGE	INFORMATION	51
5.1 Shippin	g Information	51
•••• •••• P	3	•
APPENDIX A: C	QUESTIONS AND ANSWERS	52
Q1: How to co	onfigure transparent serial port application (TCP protocol) with two HF-A11	
modules?		52
Q2: Where to	Set HF-A11 Module LAN IP and WAN IP through Web Page?	52
Q3: How to co	onfigure transparent serial port application (UDP protocol) with two HF-A11	
modules?		53
Q4: Where to	set HF-A11 module network protocol (TCP/UDP)?	53
Q5: How to co	onfigure transparent serial port application: Two HF-A11 modules all	- 4
configured as	STA and connection through AP?	54
Q6: How to av	old IP address confliction when apply HF-A11 module?	55
Q7: PC Works	as server, all HF-A11 modules works as data acquisition card and connect	
with PC, now	to configure this application?	55
APPENDIX B: E	EVB REFERENCE DESIGN	57
APPENDIX C: E	EXTERNAL POWER SHUTDOWN MODE REFERENCE DESIGN	58
APPENDIX D: C	CONTACT INFORMATION	59



LIST OF FIGURES

Figure 1.	HF-A11 Demo	8
Figure 2.	HF-A11 Pins Map	8
Figure 3.	HF-A11 Mechanical Dimension	9
Figure 4.	HF-A11 Chip Antenna Keep Out Region	10
Figure 5.	Suggested Module Placement Region	10
Figure 6.	HF-A11 Evaluation Kit	11
Figure 7.	HF-A11 Order Information	12
Figure 8.	HF-A11 Hardware Typical Application	13
Figure 9.	Ethernet Reference Design with Transformer	14
Figure 10.	Ethernet Reference Design without Transformer	14
Figure 11.	UART Interface Reference Design	15
Figure 12.	User MCU Software Flow Chart	16
Figure 13.	Multi-TCP Link Data Transmition Structure	17
Figure 14.	HF-A11 Functional Architecture	19
Figure 15.	HF-A11 Basic Wireless Network Structure	19
Figure 16.	HF-A11 AP Network Structure	20
Figure 17.	HF-A11 AP+STA Network Structure	21
Figure 18.	HF-A11 Ethernet Interface Networking (As AP)	23
Figure 19.	HF-A11 Ethernet Interface Networking (As STA, N-Ver)	23
Figure 20.	HF-A11 Ethernet Interface Networking (As STA, Z-Ver)	24
Figure 21.	HF-A11 Transparent Transmission Demo	25
Figure 22.	Open Web Management page	26
Figure 23.	Mode Selection Page	27
Figure 24.	AP Interface Setting Page	27
Figure 25.	STA Interface Setting Page	28
Figure 26.	Application Setting Page	28
Figure 27.	Device Management Page	29
Figure 28.	STA Interface Debug Connection	30
Figure 29.	AP Interface Debug Connection	30
Figure 30.	"CommTools" Serial Debug Tools	30
Figure 31.	"TCPUDPDbg" Tools Create Connection	31
Figure 32.	"TCPUDPDbg" Tools Setting	31
Figure 33.	"TCPUDPDbg" Tools Connection	32
Figure 34.	Wireless Control Application	32
Figure 35.	Remote Management Application	33
Figure 36.	Transparent Serial Port Application	33
Figure 37.	Wireless Data Acquisition Card Application	34
Figure 38.	HF-A11 Default UART Port Parameters	35
Figure 39.	Switch to Configuration Mode	35
Figure 40.	"AT+H" Instruction for Help	36
Figure 41.	Shipping Information	51
Figure 42.	Configure Transparent Serial Port Connection (TCP)	52
Figure 43.	Module LAN IP Setting	53
Figure 44.	Module WAN IP Setting	53
Figure 45.	Configure Transparent Serial Port Connection (UDP)	53
Figure 46.	Module Network Protocols: TCP/Server	54
Figure 47.	Module Network Protocol: TCP/Client	54

Figure 48.	Module Network Protocol: UDP	54
Figure 49.	Two HF-A11 Modules Connection Through AP	55
Figure 50.	Wireless Data Acquisition Card Setting	56

LIST OF TABLES

Table 1	HF-A11 Module Technical Specifications	7
Table 2	HF-A11 Pins Definition	8
Table 3	HF-A11 External Antenna Parameters	10
Table 4	HF-A11 Evaluation Kit Interface Description	11
Table 5	HF-A11 Web Access Default Setting	26
Table 6	Error Code DescribtionHF-A11 Web Access Default Setting	37
Table 7	AT+ Instruction Set List	37

HISTORY

- Ed. V3.1 Created on 1-14-2012.
- Ed. V4.0 Update AT command information on 6-25-2012.
- Ed. V4.1 Update 2.1.3 AP+STA function notes and command setting; Add 1.2.3 On-board Chip Antenna;

Update Appendix B, C on 10-15-2012.

- Ed. V4.2 Update EVB reference design and picture.
- Ed. V4.3 Update on 4-24-2013

Remove agreement transmission mode function support

Remove WDS function support

Add AT command, AT+DOMAIN, AT+FRLDEN, AT+DHCPDEN, AT+HIDESSID

Ed. V4.4 Update on 12-09-2013

Modify order information. Add HF-A11-SMA type.

Ed. V4.5 Update on 30-06-2014

Modify module appearance, package. Add some AT command such as AT+WMAC, AT+PING.

1. PRODUCT OVERVIEW

1.1. General Specification

Table 1	Madula	Technical	Creations
	would	recrimcal	Specifications

Class	Item	Parameters	
	Certification	FCC/CE	
	Wireless standard	802.11 b/g/n	
	Frequency range	2.412GHz-2.484GHz	
		802.11b: +20 dBm (Max.)	
	Transmit Dawar	802.11g: +18 dBm (Max.)	
Wireless	Transmit Power	802.11n: +15 dBm (Max.)	
Parameters		Configurable	
		802.11b: -89 dBm	
	Receiver Sensitivity	802.11g: -81dBm	
		802.11n: -71dBm	
	Antonno Ontion	External:I-PEX Connector	
	Antenna Option	Internal:On-board chip antenna	
		UART: 1200bps - 230400bps	
	Data Interface	GPIOs	
		Ethernet: 100Mpbs	
Hardware	Operating Voltage	3.3V (+/-5%)	
Parameters	Operating Current	170mA~300mA	
	Operating Temperature	-40℃- 85℃	
	Storage Temperature	-45℃- 125℃	
	Dimensions and Size	25×40×8mm	
	Network Type	STA /AP/AP+STA mode	
	Security Mechanisms	WEP/WPA-PSK/WPA2-PSK/WAPI	
	Encryption	WEP64/WEP128/TKIP/AES	
	Work Mode	Transparent Transmission and	
Software	Serial command	AT+instruction set	
Parameters	Network Protocol	TCP/UDP/ARP/ICMP/DHCP/DNS/HTTP	
	Max. TCP Connection	32	
	User Configuration	Web Server+AT command config.	
		Support customized application SW	
	User Application SW	Provide SDK package	
		Provide smart link tools	

ΉŦ

1.2. Hardware Introduction



Figure 1. HF-A11 Demo

1.2.1. Pins Definition





Table 2	HF-A11	Pins Definition
---------	--------	-----------------

Pin	Description	Name	Direction	Note
1	Ground	GND	Power	
2	VCC	3.3V	Power	3.3V @ 350mA power input
3	UART Data Transmit	UART_TXD	0	If not use UART function, this 4
	GPIO	GPIO3	I/O	pins can be configured as GPIO
4	UART Data Receive	UART_RXD	1	pins, and can change GPIO pin
	GPIO	GPIO4	I/O	status through AT command
5	UART sends request of	UART_RTS	0	
	data transmission			
	GPIO	GPIO5	I/O	
6	UART receives data	UART_CTS	I	
	transmission permission			
	GPIO	GPIO6	I/O	
7	Module reset signal	RESET	I	"Low (0)" effective reset input.

				The reset duration should be kept more than 300ms
8	WiFi status Indication	nLink	0	"1"- WIFI connection available,
	GPIO	GPIO8	I/O	"0"- No WIFI connection
				Can be configured as GPIO.
9	Indicate the module	nReady	0	"0" or "Palmodic Signal" - Finish
	status of power on			module boot up process;
	process			"1" - Module boot up not finish.
	GPIO	GPIO9	I/O	Can be configured as GPIO.
10	Restore configuration	nReload	1	Module will Restore factory
	GPIO	GPIO10	I/O	default configuration after set this
				pin "0" more than 3s, then set
				"1 ".
11	Ethernet Interface	PHY_RX+	I	+1.8V Ethernet Data Interface
12	Ethernet Interface	PHY_RX-	I	Support transformer and direct
13	Ethernet Interface	PHY_TX+	0	connection (AC couple) mode.
14	Ethernet Interface	PHY_TX-	0	

1.2.2. Mechanical Size

HF-A11 modules physical size as follows:



Figure 3. HF-A11 Mechanical Dimension

ΉF



1.2.3. On-board Chip Antenna

HF-A11 module support internal ob-board chip antenna option. When costomer select internal antenna, you shall comply with following antenna design rules and module location suggestions:

- For customer PCB, RED color region (6x8mm) can't put componet or paste GND net;
- Antenna must away from metal or high components at least 10mm;
- Antenna can't be shieldedby any meal enclosure; All cover, include plastic, shall away from antenna at least 10mm;



Figure 4. HF-A11 Chip Antenna Keep Out Region

High-Flying suggest HF-A11 module better locate in following region at customer board, which to reduce the effect to antenna and wireless signal, and better consult High-Flying technical people when you structure your module placement and PCB layout.

User PCB Board	

Figure 5. Suggested Module Placement Region

1.2.4. External Antenna

HF-A11 modules support internal antenna and external antenna option for user dedicated application. If user select external antenna, HF-A11 modules must be connected to the 2.4G antenna according to IEEE 802.11b/g/n standards.

The antenna parameters required as follows:

Item	Parameters
Frequency range	2.4~2.5GHz

Impedance	50 Ohm
VSWR	2 (Max)
Return Loss	-10dB (Max)
Connector Type	I-PEX or populate directly

1.2.5. Evaluation Kit

High-Flying provides the evaluation kit to promote user to familiar the product and develop the detailed application. The evaluation kit shown as below, user can connect to HF-A11 module with the RS-232 UART port, 100M Eth port or Wireless port to configure the parameters, manage the module or do the some functional tests.



Figure 6. HF-A11 Evaluation Kit

The external interface description for evaluation kit as follows:

Table 4	HF-A11	Evaluation	Kit Int	erface	Description
---------	--------	------------	---------	--------	-------------

Function	Name	Description
External	DC jack	5~18V power input connector
Interface	3-Pin	3-Pin RS485 interface

	DB9	Male serial jack of 9-pin, and used to connect to PC
	RJ-45	100M Eth Interface
	Module	2x7 2mm DIP connector
LED	Power (Red)	3.3V Power Indicator
	TXD	TXD Indicator
	RXD	RXD Indicator
	Ready	nReady/GPIO Indicator
	Link	nLink/GPIO Indicator
Button	Reset	Used to reset the module.
	Reload	Module restore to factory default configuration.

1.2.6. Order Information

Base on customer detailed requirement, HF-A11 series modules provide different variants and physical type for detailed application.



Figure 7. HF-A11 Order Information

1.3. Hardware Reference Design

1.3.1. Hardware Typical Application



Figure 8. HF-A11 Hardware Typical Application

Notes:

nRST- Module hardware reset signal. Input. Logics "0" effective.

There is 100K Ohm pull-up resister internal. When module power up or some issue happened, MCU need assert nRST signal "0" at least 300ms, then set" 1" to keep module fully reset.

nReady- Module boot up ready signal. Output. Logics "0" effective.

There is 4.7K Ohm pull-up resister internal. The module will output "0" "or "Palmodic Signal" after normal boot up. This signal used to judge if module finish boot up and ready for application or working at normal mode.

nLink- Module WIFI connection indication. Output.

There is 4.7K Ohm pull-up resister internal. When module connect to AP (STA mode) or some WiFi STA connect to module (AP mode), the module will output "0". This signal used to judge if module already at WiFi connection status.

nReload- Module restore to factory default configuration.Input. Logics "0" effective.

User can assert nReload signal "0" more than 3's through button or MCU pin, then release, module will restore to factory default configuration and re-start boot up process. User need add 4.7K~10K Ohm pull-up resister external the module. If not use this function, then can use AT command AT+FRLDEN=off to disable it.

UART_TXD/RXD- UART port data transmit and receive signal.

There is 1K Ohm pull-down resister internal. User can't add pull-up resister at these pins.

1.3.2. 10/100M Ethernet Interface

HF-A11 modules provide one 10/100M Ethernet PHY layer interface for data transition or user configuration. This Ethernet support with transformer and without transformer (PHY-to-PHY) 2 kinds of connection.



User board put Ethernet transformer and RJ-45 connector. This is a general 10/100M Ethernet phy layer connection. The reference design as following:



Figure 9. Ethernet Reference Design with Transformer

1.3.2.2. Ethernet Connection without Transformer

For this application, Ethernet will work as internal data transmition interface and save one transformer and RJ-45 connector. Ethernet PHY-to-PHY connection will use AC coupled connection. This is a space and cost optimized solution. Hardware reference design as following: Note: VCC signal at reference design shall base on user board PHY chipset voltage level, such as 2.5V power supply for general Ethernet PHY chipset.



Figure 10. Ethernet Reference Design without Transformer

1.3.3. UART Interface

UART interface is the serial data transmition interface mainly used for HF-A11 modules. User can add RS-232 chipset on user board and convert the signal to RS-232 voltage to communicate with outside equipment or sensors. HF-A11 modules UART interface include 4 general signals: TXD/RXD/RTS/CTS. The hardware reference design with RS-232 chipset as following:



Figure 11. UART Interface Reference Design

<u>Notes</u>: TXD pin is also hardware configuration pin internal module. So this pin MUST pull-down during module power up. HF0A11x modules provide internal pull-down resister, user can't add pull-up/pull-down resister on user board, which may cause module can't work.

1.3.4. Power Interface

HF-A11 module support single +3.3V power supply. The peak current shall about 350mA and normal WiFi working current shall about 200mA. The power save (WiFi OFF) mode will about 100mA

Decoupling at power pin suggested, At least one 100uF and one 10uF capacitor required at user board and put near module power input pin will increase the reliability and performance.

1.4. Software Reference Design

When HF-A11 modules boot up phase, the general user board MCU software flow chart will as following:



Figure 12. User MCU Software Flow Chart

When HF-A11 modules boot up, user can select one work mode base on the setting, and user can switch to the configuration mode at any kinds of work mode.

1.4.1. Transparent Transmission Mode

HF-A11 modules support serial interface transparent transmission mode. The benefit of this mode is achieves a plug and play serial data port, and reduces user complexity furthest. In this mode, user should only configure the necessary parameters. After power on, module can automatically connect to the default wireless network and server.

As in this mode, the module's serial port always work in the transparent transmission mode, so users only need to think of it as a virtual serial cable, and send and receive data as using a simple serial. In other words, the serial cable of users' original serial devices is directly replaced with the module; user devices can be easy for wireless data transmission without any changes.

The transparent transmission mode can fully compatible with user's original software platform and reduce the software development effort for integrate wireless data transmission.

Notes: Transparent transmission mode as a low level phy layer data transmitting can't keep zero error rates by itself. User can enable UART port's hardware flow control CTS/RTS function or though higher layer protocol such as TCP to lower error rate and mange the data completeness. High-Flying recommend when doing large amounts of data transmitting in transparent transmission mode, hardware flow control should be enabled, so as to fully ensure reliable data transmission. In the applications which doesn't need flow control, users can simply leave RTS / CTS pin vacant.

1.4.2. Configuration Mode

In configuration mode, user can finish HF-A11 module configuration management and parameters setting work. In work mode (Transparent Transmission), user can switch to the configuration mode through AT+instruction, detailed switch operation refer to "AT+ instruction set" chapter.



When HF-A11 module configured as TCP Server, it supports Multi-TCP link connection, and maximum 32 TCP clients permit to connect to HF-A11 module. User can realize multi-TCP link connection at each work mode.

Multi-TCP link connection will work as following structure:

- Upstream: All dates from different TCP connection or client will be transmitted to the serial port as a sequence.
- Downstream: All data from serial port (user) will be duplicate and broadcast to every TCP connection or client.

Detailed multi-TCP link data transmition structure as following figure:



Figure 13. Multi-TCP Link Data Transmition Structure

1.4.4. TCPB Function

HF-A11 support 2xTCP function, which means module can support 2 network connections at the same time. The 2nd net work connection called TCPB. TCPB only works as TCP Client and its configuration can only through AT command, not Web configuration supported. The command as following,

- > AT+TCPB=on, Enable TCPB function;
- > AT+TCPPTB=<port>, Set TCPB port number;
- > AT+TCPADDB=<IP or domain>, Set TCPB's server address;
- > AT+TCPTOB=<time>, Set TCPB timeout;
- > AT+TCPLKB, Query TCPB link status;

Detailed command describition refer ro AT instruction chapter. After enable TCPB function, two network interfaces' work mode like "Multi-TCP Link", All dates from each TCP connection will be transmitted to the serial port as a sequence and all data from serial port (user) will be duplicate and broadcast to each TCP connection.

1.4.5. GPIO Function

HF-A11 module support 2 GPIO mode: GPIO-1 and GPIO-2. At GPIO-1 mode, UART (TXD/ RXD/CTS/RTS) defined as GPIO and others (nReady/nLink/nReload) defined as functional pin. At GPIO-2, all these 7 pins defined as GPIO. So, GPIO mode not supports UART communication. When module works at GPIO mode, PC and other equipts can setup connection (TCP/UDP) through WiFi, then read/write GPIO information through command.

- > GPIO n IN, Set GPIOn as input, Response GPIO OK or GPIO NOK;
- > GPIO n OUT 0, Set GPIOn as output and output '0', Response GPIO OK or GPIO NOK;
- > GPIO n OUT 1, Set GPIOn as output and output '1', Response GPIO OK or GPIO NOK;
- GPIO n SW, Set GPIOn as output and switch the output status, Response GPIO OK or GPIO NOK;



- GPIO n PWM m1 m2, Set GPIOn output a wave: m1 is 'high' duration and m2 is 'low' duration (Time unit is 'ms' and minimal is 10ms), Response GPIO OK or GPIO NOK;
- GPIO n GET, Read GPIOn status, Response I0,I1,O0,O1, means"input low","input high","output low","output high"

<u>Notes:</u> n can be 3, 4, 5, 6, 8, 9, 10 corresponding module pin. GPIO 4 and 10 can only defined as input and GPIO 3 can only defined as output.

1.4.6. Palmodic Signal

Base on selected factory default setting, nReady signal can have two output statuses:

- Status One: The module will output "0" after normal boot up. This signal used to judge if module finish boot up and ready for application.
- Status Two: The module will output "Palmodic Signal" after normal boot up. The palmodic signal is 0.5Hz square wave with dutyfactor 1:1. User can query this signal to judge if module active "live" or need to re-boot. When module switches to command mode, it will output "0", which used to distinguish work mode and command mode.

Notes:

This function is user selected factory setting and RELD instruction will not effective for this function. If user not requires this function, the default factory setting is Status One. Contact with Hi-flying for more detailed support.

2. FUNCTIONAL DESCRIPTION

2.1. Wireless Networking

HF-A11 module can be configured as both wireless STA and AP base on network type. Logically there are two interfaces in HF-A11. One is for STA, and another is for AP. When HF-A11 works



Following figure shows the functional architecture of HF-A11 module:



Figure 14. HF-A11 Functional Architecture

Notes:

AP: that is the wireless Access Point, the founder of a wireless network and the centre of the network nodes. The wireless router we use at home or in office may be an AP. **STA**: short for Station, each terminal connects to a wireless network (such as laptops, PDA and other networking devices) can be called with a STA device.

2.1.1. Basic Wireless Network Based On AP (Infrastructure)

Infrastructure: it's also called basic network. It built by AP and many STAs which join in. The characters of network of this type are that AP is the centre, and all communication between STAs is transmitted through the AP. The figure following shows such type of networking.



Figure 15. HF-A11 Basic Wireless Network Structure

2.1.2. Wireless Network Based On AP Network

As showing in the figure below, HF-A11 (1) can be treat as an AP, and HF-A11 (2), HF-A11 (3) and the laptop are STAs connected to HF-A11 (1). Meanwhile, all HF-A11 modules can connected to user device via UART interface. All HF-A11 modules can be operated and managed through the laptop. So it is convenient to O&M all HF-A11 modules. Moreover, in such AP network structure, the whole coverage of a wireless network can be extended easily.



Figure 16. HF-A11 AP Network Structure

2.1.3. Wireless Network Based On AP+STA

HF-A11 module support AP+STA network mode, means module support one AP interface and one STA interface at the same time, as following figure,



When module enables AP+STA function, Module's STA interface can connect with router and connect to TCP server in the network. At the same time, module's AP interface is also active and permit phone/PAD to connect through TCPB, then phone/PAD can control user device and and setting the module parameters,

The advantage of AP+STA mode is:

- Users can easily setting and track user device through Phone/PAD and not change the orginal network setting.
- Users can easily setting module's parameters through WiFi when module works as STA mode.

AP+STA Mode Setting:

AP+STA mode need serial AT command to enable as follows:

- > **AT+FAPSTA=on**, Enable AP+STA mode;
- > Then, when you configure module works as STA mode, it's AP interface still active;

AP+STA Mode Notes:

When user enable AP+STA function, the STA port need to keep connected with other router (AP), or STA port will have to scan the AP frequently, which will affect AP port function and may cause some data loss.

So, if user confirm STA port can't connect with AP at some time, user can disable the STA scan through the following command:

- AT+STTC=on/off, on: Scan AP; off: No scan AP. After re-start module, this command not saved;
- AT+FSTTC=on/off;
 This command is saved after re-starting the module;

2.2. Auto- Frequency Function

When module works as STA, HF-A11 will adjust its wireless channel to keep the same channel with associated AP and connect in.

When module works as AP and HF-A11 enable Auto-frequency function, then when module boot



2.3. Security

HF-A11 module supports multiple wireless encryption mechanisms, and enables to protect the security of user's data transmission, the mechanisms include:

- ♦ WEP
- WPA-PSK/TKIP
- WPA-PSK/AES
- WPA2-PSK/TKIP
- WPA2-PSK/AES

2.4. UART Frame Scheme

2.4.1. UART Free-Frame

HF-A11 support UART free-frame function. If user select open this function, module will check the intervals between any two bytes when reciving UART data. If this interval time exceeds defined value (50ms default), HF-A11 will think it as the end of one frame and transfer this free-frame to WiFi port, or HF-A11 will receive UART data untill 4K bytes, then transfer 4KB frame to WiFi port.

HF-A11's default interval time is 50ms. User can also set this interval to fast (10ms) through AT command. But user have to consider if user MCU can send UART data with 10ms interval ,or the UART data may be divide as fragment.

Through AT command: AT+FUARTTE=fash/normal, user can set the interval time: fast (10ms) and normal (50ms). This command is factory default setting command and AT+RELD can't change its value.

2.4.2. UART Auto-Frame

HF-A11 support UART auto-frame function. If user select open this function and setting autoframe trigger length and auto-frame trigger time parameters, then module will auto framing the data which received from UART port and transmitting to the network as pre-defined data structure.

- Auto-frame trigger length: The fixed data length that module used to transmitting to the network.
- Auto-frame trigger time: After the trigger time, if UART port received data can't reach auto-frame trigger length, then module will transmitting available data to the network and bypass the auto-frame trigger length condition.

Detailed UART auto-frame function can refer to AT+ instruction set "UARTF/UARTFT/UARTFL" introduction.

2.5. Address Binding

HF-A11 module supports the feature of binding the BSSID address of target network. According to the provisions of 802.11 protocol, different wireless networks can have a same network name (i.e. SSID / ESSID), but must correspond to a unique BSSID address (i.e. MAC address). Illegal intruders can create a wireless network with the same SSID / ESSID, it will make STAs in the network to join to the illegal AP, thereby and then network leakage happen.

Users can prevent STA from joining to illegal network by binding the BSSID address, to improve wireless network security.

2.6. Ethernet Interface Communication

HF-A11 module provides one 10/100M Ethernet interface. With this Ethernet interface, user can easily realize the three interface (WiFi, UART, and Ethernet) intercommunication and networking. HF-A11 module can configured as **Bridge Mode** or **Router Mode** base on different networking technology.

<u>Notes:</u> The Ethenet function is disabled by default because of the large power consumption. Users may input "AT+FEPHY=on" and reset to enable Ethenet. HF-A11 may need different configuration to support different Ethenet Networking mode (Such as "N-Ver" and "Z-Ver" as following, which need AT+FVER=n to switch to N-Ver or AT+FVER=z to switch to Z-Ver).

2.6.1. HF-A11 Ethernet Interface Networking (As AP)



Figure 18. HF-A11 Ethernet Interface Networking (As AP)

For above networking, HF-A11 module works as AP and also the centre of this network. All devices' IP address in this network shall use the same network segment with HF-A11 and they can intercommunication with this method.

2.6.2. HF-A11 Ethernet Interface Networking (As STA, N-Ver)



Figure 19. HF-A11 Ethernet Interface Networking (As STA, N-Ver)

For above networking, HF-A11 module works as STA (Firmware is N-Version), and module configured as router mode. When module connect to AP, it will get wireless port IP address from AP (For example: 192.168.1.100). At the same time, module also form a subnet (Default 10.10.100.254) and all devices connected to module Ethernet interface will get assigned IP address (For example: 10.10.100.101). So for above networking, PC1 at internal subnet can initiate a connection to PC2 (For HF-A11 works as router mode), but PC2 can't active initiate a connection to PC1.



2.6.3. HF-A11 Ethernet Interface Networking (As STA, Z-Ver)

Figure 20. HF-A11 Ethernet Interface Networking (As STA, Z-Ver)

For above networking, HF-A11 module works as STA (Firmware is Z-Version), and module configured as bridge mode. When module connect to AP, all devices connected to module Ethernet interface will get assigned IP address from AP (For example: 192.168.1.101).For module works as bridge mode, it can be treated as a transparent device and PC1, PC2 can communicate without any limit. But in this networking, HF-A11 module needs assign a static LAN IP address (For example: 192.168.1.10) if module also needs communication with AP or configuration through web page.

2.7. Search Function for STA

When using web configuration STA Interface Setting Page, user can push "Search" button to find surrounding AP, and find a AP to associated.

2.8. Work Mode

HF-A11 modules provide two kinds of work mode: Transparent transmission mode. Transparent transmission mode achieves a plug and play serial data port, and reduces user complexity. User can save the configuration information to the flash of HF-A11, then module will go into the appointed work mode after power up.

For a module which already finished parameters setting, it will try to connect a wireless network and server with these parameters after power up, and serial interface is also active with preconfigured parameters. Then all the data is transferred directly between serial interface and Wifi interface without any interpreted.

The parameters which need to configure include:

> Wireless Network Parameters

- Wireless Network Name (SSID)
- Security Mode
- Encryption Key

> TCP/UDP Linking Parameters

- Protocol Type
- Link Type (Server or Client)
- Target Port ID Number
- Target Port IP Address
- Serial Port Parameters
 - Baud Rate
 - Data Bit

- Parity (Check) Bit
- Stop Bit
- Hardware Flow Control

> Work Mode Selection

Transparent transmission

Transparent transmission demo as showing in the following figure, a HF-A11 module can be taken as a virtual serial line when UART interface working in transparent transmission mode. And user device will realize wireless data transmition almost without any changes.



Figure 21. HF-A11 Transparent Transmission Demo

2.9. Network Protocol

HF-A11 module supports TCP/UDP network protocol and the port parameters can be set via web accessing or AT+instruction set.

2.10. Parameters Configuration

HF-A11 module supports two methods to configuration parameters: **Web Accessing** and **AT+instruction set**.

Web accessing means users can configure parameters through Web browser. When HF-A11 module connected to wireless network, parameters configuration is done on a PC connected to the same wireless network. AT+instruction set configuration means user configure parameters through serial interface command. Refer to "AT+instruction set" chapter for more detail.

Notes:

High-Flying can customized the parameters setting as customer request and ship HF-A11 modules with these parameters as factory default configuration. It will reduce user's module configuration time for mass production. Also, if user need different parameters setting for every module, High-Flying can provide the **auto-configuration tool** to speed up the module conguration duration. Please contact High-Flying technical interface to acquire this tool if required.

2.11. Firmware Upgrade

HF-A11 module supports firmware upgrade online; User can upgrade firmware via web access.

2.12. GPIO Function

HF-A11 module can provide maximum 7 GPIO pins, Refer to "1.2.1 Pin Definition" charter, which include 4 UART pins and 3 general use pins can be customized as GPIO pins if these functions are not required. As GPIO functional pin, user devices can read/write GPIO pins status through AT+instruction set.

3. OPERATION GUIDELINE

3.1. Configuration via Web Accessing

When first use HF-A11 modules, user may need some configuration. User can connect to HF-A11 module's wireless interface with following default setting information and configure the module through laptop.

Parameters	Default Setting
SSID	HF-A11x_AP
IP Address	10.10.100.254
Subnet Mask	255.255.255.0
User Name	admin
Password	admin

Table 5 HF-A11 Web Access Default Setting

3.1.1. Open Web Management Interface

Step 1: Connect laptop to SSID "HF-A11x_AP" of HF-A11 module via wireless LAN card; Step 2: After wireless connection OK. Open Wen browser and access "http://10.10.100.254"; Step 3: Then input user name and password in the page as following and click "OK" button.

The server 10.10,10.254 at GoAhead requires a username and password. Warning: This server is requesting that your username ap password be sent prán insecure manner (basic authentica without a secure formation).	e d tion
User name:	~
Password:	\Box
Remember my password	
	1
OK Cancel	

Figure 22. Open Web Management page

The HF-A11 web management page support English and Chinese language. User can select language environment at the top right corner and click "Apply" button.

The main menu include five pages: "Mode Selection"," AP Interface Setting","STA Interface Setting", "Application Setting", and "Device Management"

Notes:

Default, High-Flying suggests all Web management related operation shall execute at AP mode. (Even you need configure STA parameters and want module works as STA mode). If user selects STA mode and still want to configurate the module through Web browser, you have to access the module through another AP (and get the module IP address through this AP.)

3.1.2. Mode Selection Page

This page use to setting the module working mode (Transparent Transmission or) and wireless networking mode (AP and STA mode).





Figure 23. Mode Selection Page

3.1.3. AP Interface Setting Page

This page use to setting the parameters when HF-A11 module works as AP.

Mode Selection	AP Interface Setting	
AP Interface Setting	AP Interface Setting , such as : SSI	D, Security
STA Interface Setting		
Application Setting	Wireless Network	
Device Management	Network Mode	11b/g/n mixed mode 💌
	Network Name(SSID)	HF-A11x_AP Hidden 🗆 Isolated 🗆
	Broadcast Network Name (SSID)	Enable Disable
	AP Isolation	C Enable O Disable
	BSSID	88:8B:5D:70:04:87
	Frequency (Channel)	AutoSelect
	Appl	y Cancel
	"HF-A11x_AP"	
	Security Mode	Disable
	Appl	y Cancel
	IP Address	10 10 100 254
		10.10.234
	Subnet Mask	255.255.255.0
	MAC Address	38:88:5D:70:04:87
	рнср туре	Server M
	Default DHCP Gateway	10.10.254
	Apply	Cancel

Figure 24. AP Interface Setting Page

3.1.4. STA Interface Setting Page

This page use to setting the parameters when HF-A11 module works as STA. Such as SSID of AP which module need to connected, and also select the networking type: DHCP or static IP address.



Mode Selection	STA Interface Set	ting
AP Interface Setting STA Interface Setting	You could configure STA interf	ace parameters here.
Application Setting	STA Interface Parameters	
Device Management	SSID	HF-A11x_AP
	MAC Address (Optional)	
	Security Mode	OPEN -
	Encryption Type	None 💌
		Apply Cancel
	WAN Connection Type:	DHCP (Auto config)
	DHCP Mode	
	Hostname (optional)	
		Apply Cancel

Figure 25. STA Interface Setting Page

3.1.5. Application Setting Page

This page use to setting the parameters of serial port communication, such as UART setting and high layer network protocol setting which used support serial communication.

Mode Selection	AP Interface Setting	9
AP Interface Setting	AP Interface Setting, such as : S	SID, Security
STA Interface Setting		
Application Setting	Wireless Network	
<mark>▶ Device Management</mark>	Wifi-Uart Setting	
	You could configure the Uart par application.	ameters and network parameters of the wifi-uart
	Ilart Setting	
	Baudrate	57600
	Data Rite	
	Parita:	
	Parity	
	Stop	
	CTSRTS	Disable
	Ap	Cancel
	Net Setting	
	Mode	Server 💌
	Protocol	TCP 💌
	Port	8899
	IP Address	10.10.10.
	TCP Time out (MAX 600 s)	300
	Ар	Cancel

Figure 26. Application Setting Page

Notes:

Generally, Network protocols support three modes: **TCP Server**, **TCP Client**, **and UDP**. UDP has no server and client requirement according to standard.

Besides module working as TCP Server (IP address not required in this mode). User must set the IP address of the device which need communicate with HF-A11 module.

Also the Port ID between two sides of the communication devices must keep the same.

3.1.6. Device Management Page

This page use to manage HF-A11 module general setting, such as administrator setting, restart module button, restore factory default setting button, and update firmware through webpage.

Mode Selection	Device Management
AP Interface Setting	You may configure administrator account and password, load default setting or update
STA Interface Setting	nrware.
Application Setting	Adminstrator Settings
Device Management	Account admin
	Password Apply Cancel
	Restart Module
	Restart Module Restart
	Load Factory Defaults
	Load Default Button Load Default
	Update Firmware Location: Browse

Figure 27. Device Management Page

Notes:

Restart module button: When you setting the parameters of different web pages, you will click "Apply" button to confirm the setting, but the setting take effect only after user click the "Restart" button here, the module will re-boot up and reflash the memory information with new changes.

3.2. HF-A11 Usage Introduction

3.2.1. Software Debug Tools

High-Flying use two common software tools debugging and applying HF-A11 modules. (User can also select other tools used to debug serial and Ethernet port).

- Serial Debugging Software: ComTools
- 🍲 ComTools.exe
- Ethernet Debugging Software: TCPUDPDbg ZCPUDPDbg.exe

3.2.2. Network Connection

User can select two methods to connect HF-A11 module base on dedicated application.



> Use HF-A11 STA interface

HF-A11 and debug PC2 connect to a wireless AP, another PC1 (or user device) connect to HF-A11 module with serial port:



Figure 28. STA Interface Debug Connection

> Use HF-A11 AP interface

Debug PC2 connect to HF-A11 through wireless connection, another PC1 (or user device) connect to HF-A11 module with serial port.



Figure 29. AP Interface Debug Connection

3.2.3. Module Debug

PC1 open "CommTools" program, setting the same serial port parameters with HF-A11 module and open serial port connection.



Figure 30. "CommTools" Serial Debug Tools

PC2 open "TCPUDPDbg" program, and create a new connection. If HF-A11 configured as Server mode, "TCPUDPDbg" Tools shall create "Client "mode connection. Or otherwise, create a "Server" mode connection.



Figure 31. "TCPUDPDbg" Tools Create Connection

Then setting the TCP/UDP connection parameters. Default as following:

Create Connection			×
Type: TCP	•		
DestIP: 10.10.100.254		Port: 8899	>
LocalPort 💿 Auto	0 :	Specia 4001	
📕 AutoConn:	Eve	0	z
Send When Conn:	Eve		ms
Create	C	ancel	

Figure 32. "TCPUDPDbg" Tools Setting

Then, click "Create" button to create a connection.

: Operate(<u>O</u>) View(<u>V</u>) Windows(<u>W</u>) Help(H) Language ×
🗄 🚰 CreateConnn 🔇 CreateServer 🛛	🗏 StartServer 🗏 🐼 🗝 Connect 🛫 🏖 DisconnAll 💥 DeleteConn 🎇 🔯 🕏 🥊
Properties 🛛 🗜 🗙	↓ ↓ ×
Clent Mode	DestIF: Send AtuoSend Eve 100 ms Send Stop DestFort: 0899 Send Hex Send File Send Received Clear Option BroadOption LocalFort 4001 Type TCP Item file Send Received Clear Option BroadOption Send Hex Send File Send Received Clear Option BroadOption AtuoConn Eve Send Set Set Set Connect Count Save Option ShowHex Set Recv O Clear Save (In Time)

Figure 33. "TCPUDPDbg" Tools Connection

Now, in transparent transmission mode (HF-A11 default setting), data can be transferred from "CommTools" program to "TCPUDPDbg" program, or in reverse. You can see data in receiver side will keep same as in sender side.

3.3. Typical Application Examples

3.3.1. Wireless Control Application



Figure 34. Wireless Control Application

For this wireless control application, HF-A11 works as AP mode. Module's serial port connects to user device. So, control agent (Smart phone for this example) can manage and control the user device through the wireless connection with HF-A11 module.



3.3.2. Remote Management Application



Figure 35. Remote Management Application

For this remote management application, HF-A11 works as STA mode and connects to Internet through wireless AP. Module configured as TCP Client and communicates with remote TCP server at Internet. Module's serial port connects to user device.

So, user device's data or sampling information can send to remote TCP server for storage or processing. Also remote TCP server can send command to control and manage the user device through the wireless network.

3.3.3. Transparent Serial Port Application

For this transparent serial port application, two HF-A11 modules connect as below figures to build up a transparent serial port connection.



Figure 36. Transparent Serial Port Application

For left side HF-A11 module, configured as AP mode and use default SSID and IP address, network protocol configured as TCP/Server mode, and protocol port ID: 8899.

For right side HF-A11 module, configured as STA mode and setting the same SSID ("HF-A11_AP" for this example) with left side HF-A11 module, enable DHCP network and network



When right side HF-A11 boot up, it will find wireless AP (SSID: HF-A11_AP for this example) and open TCP/Client network protocol to connect with left side module's TCP/Server. All these operation will be automatic and after finished, the two user devices connected to HF-A11 module through serial port can communicate each other and think the connection between them is fully transparent.

3.3.4. Wireless Data Acquisition Card Application

For this wireless data acquisition card application, one PC works as data server and every data acquisition card connects with a HF-A11 module to support wireless connection function.



Figure 37. Wireless Data Acquisition Card Application

As above figure, one HF-A11 configured as AP mode and all others configured as STA mode. All HF-A11 which configured as STA and data server PC wireless connected to HF-A11 which configured as AP to make up a wires network.

Data server PC open TCP/Server protocol and all HF-A11 modules open TCP/Client protocol. All data acquisition cards' data and sampling information can be transmitted to data server PC for operation.

4. AT+INSTRUCTION INTRODUCTION

4.1. Configuration Mode

When HF-A11 power up, it will default works as transparent transmission mode, then user can switch to configuration mode by serial port command. HF-A11 UART default parameters setting as below figure,

art Setting		
Baudrate	57600	
Data Bits	8 🗸	
Parity	None 💌	
Stop	1 💌	
CTSRTS	Disable 💌	

Figure 38. HF-A11 Default UART Port Parameters

In configuration mode, user can setting the module through AT+ instruction set, which cover all web page setting function.

4.1.1. Switch to Configuration Mode

Two steps to finish switching from transparent transmission mode to configuration mode.

- > UART input "+++", after module receive "+++", and feedback "a" as confirmation.
- UART input "a", after module receive "a" and feedback "+ok" to go into AT+ instruction set configuration mode.

Serial-COI3 - SecureCRT										×
文件(E) 编辑(E) 查看(Y) 选项(D) 传输(E) 脚本(S) 工具(D	() 帮助	(<u>H</u>)								
🖏 🖏 🗔 🏭 🖎 🛍 🖓 😼 🖂 🚰 💥 🏌 💿 🛓	8									
Serial-COM3										×
a+ok										^
										~
就绪	Serial:	COM3	З,	1	26行,	90列	VT100	大写	数字	

Figure 39. Switch to Configuration Mode

Notes:

- 1. When user input "+++" (No "Enter" key required), the UART port will display feedback information "a", and not display input information"+++" as above UART display.
- 2. Any other input or wrong step to UART port will cause the module still works as original mode (transparent transmission).



User can input AT+ Instruction through hyper terminal or other serial debug terminal, also can program the AT+ Instruction to script. User can also input "AT+H" to list all AT+ Instruction and description to start.

Serial-COL3 - SecureCRI	
文件 (2) 编辑 (2) 查看 (Y) 选项 (2) 传输 (1) 脚本 (2) 工具 (2) 帮助 (4)	
1997 第二日 1997 1997 1997 1997 1997 1997 1997 199	
I Serial-COM3	×
a+ok	^
AT+H +ok= AT+: NONE command, reply "+ok". AT+E: Echo ON/Off, to turn on/off command line echo function. AT+ETP: Set/Get the Net Protocol Parameters. AT+WETP: Set/Get the Net Protocol Parameters. AT+WART: Set/Get the VART Parameters of WIFI STA Mode. AT+WSSID: Set/Get the Security Parameters of WIFI STA Mode. AT+WSSID: Set/Get the Login Parameters of WEB page. AT+WEBU: Set/Get the Login Parameters of WEB page. AT+WAREY: Set/Get the Security Parameters of WIFI AP Mode. AT+WSCAN: Get The AP site Survey (only for STA Mode) AT+WSCAN: Get The AP site Survey (only for STA Mode) AT+MID: Get The Module ID, eg. All-yymmddxxxx (yy:year, mm:month, dd:day,xxxx:serial num] AT+H: Help)
就绪 Serial: COM3 22, 1 26行, 98列 VT100 フ	大写数字 🛒

Figure 40. "AT+H" Instruction for Help

4.2.1. Instruction Syntax Format

AT+Instruction protocol is based on the instruction of ASCII command style, the description of syntax format as follow.

- > Format Description
 - <>: Means the parts must be included
 - []: Means the optional part
- > Command Message

AT+<CMD>[op][para-1,para-2,para-3,para-4...]<CR>

- AT+: Prefix of command message;
- CMD: Command string;
- [op]: Symbol of command operator,
 - "=": The command requires parameters input;
 - "NULL": Query the current command parameters setting;
- [para-n]: Parameters input for setting if required;
- CR>: "Enter" Key, it's 0x0a or 0x0d in ASCII;

<u>Notes:</u> When input AT+Instruction, "AT+<CMD>" character will display capital letter automatic and other_parts will not change as you input.

Response Message

+<RSP>[op] [para-1,para-2,para-3,para-4...]<CR><LF><CR><LF>

- +: Prefix of response message;
- RSP: Response string;



- ♦ "ok" : Success♦ "ERR": Failure
- ▼ EKP
 [op]:=
- [para-n]: Parameters if query command or Error code when error happened;
- CR>: ASCII 0x0d;
- <LF>: ASCIII 0x0a;

Error Code

Table 6 Error Code DescribtionHF-A11 Web Access Default Setting

Error Code	Description	
-1 Invalid Command Format		
-2	Invalid Command	
-3	Invalid Operation Symbol	
-4	Invalid Parameter	
-5	Operation Not Permitted	

4.2.2. AT+ Instruction Set

Instruction	Description	
<null></null>	NULL	
E	Open/Close show back function	
ENTM	Set module into transparent transmition mode	
NETP	Set/Query network protocol parameters	
UART	Set/Query serial port parameters	
UARTF	Open/Close UART auto-frame function	
UARTFT	Set/Query UART auto-frame trigger time	
UARTFL	Set/Query UART auto-frame trigger length	
TMODE	Set/Query data transmition mode	
	(transparent transmition)	
WMODE	Set/Query WIFI work mode (AP or STA)	
WSKEY	Set/Query WIFI security parameters as STA	
WSSSID Set/Query WIFI target AP SSID parameters as ST		
WSLK Query WiFi link status as STA		
WEBU	Set/Query WEB page login parameters	
	(User Name and Password)	
WAP	Set/Query WIFI parameters as AP	
WAKEY	Set/Query WIFI security parameters as AP	
HIDESSID	Set/Query hide AP's SSID	
MSLP	Set modules into power save mode.(Turn OFF WiFi)	
WSCAN	Seek AP when module works as STA mode	
TCPLK	Query if TCP link already build-up	
TCPDIS	Open/Cose TCP (Only TCP Client available)	
WANN	Set/Query WAN setting, only effective as STA mode	
LANN	Set/Query LAN setting, only effective as AP mode	
DHCPDEN	Enable/Disable LAN DHCP server function	
DHCPGW	Set/Query DHCP gateway address	

ТСРТО	Set/Query TCP timeout
MAXSK	Set/Query maxima TCP connection
ТСРВ	Open/Close TCPB function
TCPPTB	Set/Query TCPB port number
TCPADDB	Set/Query TCPB server address
TCPTOB	Set/Query TCPB time out time
TCPLKB	Query TCPB link status
EPHY	Open ETH interface
STTC	Enable/Disable STA port scan function
DOMAIN	Set/Query domain ofmodule webpage
FRLDEN	Enable/Disable nReload pin function
RELD	Restore to factory default setting
Z	Re-start module
MID	Query module ID information
WRMID	Set module ID
VER	Query module software version information
Н	Help
FVEW	Enable/Disable WANN mode
FVER	Set/Query working mode
WMAC	Set/Query AP MAC address
PING	PING command

Notes: HF-A11 module can works as AP or STA, user have to use different AT+ Instruction to set WiFi parameters when module works as AP or STA mode.

4.2.2.1. AT+E

- Function: Open/Close show back function;
- Format:

AT+E<CR> +ok<CR><LF><CR><LF>

When HF-A11 module firstly switch from transparent transmission to configuration mode, show back status is open, input "AT+E" to close show back function, input "AT+E" again to open show back function.

4.2.2.2. AT+ENTM

- Function: Set module into transparent transmition mode;
- Format:

AT+ENTM<CR> +ok<CR><LF><CR><LF>

When operate this command, module switch from configuration mode to transparent transmission mode.

4.2.2.3. AT+NETP

- Function: Set/Query network protocol parameters;
- Format:
 - Query Operation



AT+NETP<CR> +ok=<protocol,CS,port,IP><CR><LF><CR><LF> ♦ Set Operation AT+NETP=<protocol,CS,port,IP><CR> +ok<CR><LF><CR><LF>

- Parameters:
 - protocol:
 - ♦ TCP
 - ♦ UDP
 - CS: Network mode:
 - ♦ SERVER
 - ♦ CLIENT
 - Port: protocol port ID: Decimal digit and less than 65535
 - ♦ IP: Server's IP address when module set as client

After HF-A11 module boots up again, the setting will be effective.

4.2.2.4. AT+UART

- Function: Set/Query serial port parameters;
- Format:
 - Query Operation

AT+UART<CR>

+ok=<baudrate,data_bits,stop_bit,parity,flowctrl><CR><LF>< Set Operation

AT+UART=<baudrate,data_bits,stop_bit,parity><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - baudrate:
 - ♦ 1200,1800,2400,4800,9600,19200,38400,57600,115200,230400,345600, 460800
 - data_bits:
 - ♦ 5,6,7,8
 - stop_bits:
 - ♦ 1,2
 - parity:
 - ♦ NONE, EVEN, ODD, MARK, SPACE
 - flowctrl: hardware flow control (CTSRTS)
 - ♦ NFC: No flow control
 - ♦ FC: flow control

After HF-A11 module boots up again, the setting will be effective.

4.2.2.5. AT+ UARTF

- Function: Open/Close UART auto-frame function;
- Format:
 - Query Operation
 - AT+ UARTF<CR>
 - +ok=<para><CR><LF><CR><LF>
 - Set Operation
 - AT+ UARTF=<para ><CR>
 - +ok<CR><LF><CR><LF>
- Parameters:
 - para:
 - ♦ disable Close auto-frame function;
 - ♦ enable Open auto-frame function;



- 4.2.2.6. AT+ UARTFT
 - Function: Set/Query UART auto-frame trigger time;
 - Format:

 ♦ Query Operation
 AT+ UARTFT<CR>
 +ok=<time><CR><LF><CR><LF>
 ♦ Set Operation

AT+ UARTFT=<time ><CR> +ok<CR><LF><CR><LF>

- Parameters:
 - time: Range 100 ~10000; Unit: ms. Auto-frame trigger time
- 4.2.2.7. AT+ UARTFL
 - Function: Set/Query UART auto-frame trigger length;
 - Format:
 - Query Operation
 - AT+ UARTFL<CR>

+ok=<len><CR><LF><CR><LF>

Set Operation

AT+ UARTFL=<len ><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - len: Range 64 ~4096; Unit: byte. Auto-frame trigger length;

4.2.2.8. AT+TMODE

- Function: Set/Query data transmition mode;
- Format:
 - Query Operation
 - AT+TMODE<CR>

+ok=<tmode><CR><LF><CR><LF>

Set Operation

AT+ TMODE=<tmode><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - tmode: Data transmition mode
 - ♦ Through: Transparent transmition

After HF-A11 module boots up again, the setting will be effective.

4.2.2.9. AT+WMODE

- Function: Set/Query WIFI work mode;
- Format:
 - Query Operation
 - AT+WMODE<CR>

+ok=<mode><CR><LF><CR><LF>

Set Operation

AT+ WMODE=<mode><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - mode:WIFI work mode
 - ♦ AP
 - ♦ STA

After HF-A11 module boots up again, the setting will be effective.



4.2.2.10. AT+WSKEY

- Function: Set/Query WIFI security parameters as STA;
- Format:
 - Query Operation

AT+WSKEY<CR> +ok=<auth,encry,key><CR><LF><CR><LF> ♦ Set Operation

AT+ WSKEY=< auth,encry,key><CR> +ok<CR><LF><CR><LF>

- Parameters:
 - auth: Authentication mode
 - ♦ OPEN
 - ♦ SHARED
 - ♦ WPAPSK
 - encry:Encryption algorithm
 - ♦ NONE: When "auth=OPEN", effective
 - ♦ WEP-H: When "auth=OPEN" or "SHARED", effective, HEX format
 - ♦ WEP-A: When "auth=OPEN" or "SHARED", effective, ASCII format
 - \diamond TKIP: When "auth= WPAPSK", effective
 - ♦ AES: When "auth= WPAPSK", effective
 - key: password, ASCII code, shall less than 64 bit and greater than 8bit

This Instruction only effective for HF-A11 works as STA. After HF-A11 module boots up again, the setting will be effective. But user can set this command when module configured as AP.

4.2.2.11. AT+WSSSID

- Function: Set/Query WIFI target AP SSID parameters as STA.
- Format:

i onnat.
 Query Operation
AT+WSSSID <cr></cr>
+ok= <ap's ssid=""><cr><lf><cr><lf></lf></cr></lf></cr></ap's>
 Set Operation
AT+ WSSSID= <ap's ssid=""><cr></cr></ap's>
+ok <cr><lf><cr><lf></lf></cr></lf></cr>
Paramotore:

- Parameters:
 - ap's ssid: AP's SSID

This Instruction only effective for HF-A11 works as STA. After HF-A11 module boots up again, the setting will be effective. But user can set this command when module configured as AP.

4.2.2.12. AT+ WSLK

- Function: Query WiFi link status as STA
- Format:
 - Query Operation
 - AT+ WSLK<CR>

+ok=<ret><CR><LF><CR><LF>

- Parameters:
- ♦ ret
 - ♦ "Disconnected", if no WiFi connection;
 - ♦ "AP' SSID (AP's MAC"), if WiFi connection available;
 - ♦ "RF Off", if WiFi OFF;

This Instruction only effective for HF-A11 works as STA. After HF-A11 module boots up again, the setting will be effective. But user can set this command when module configured as AP.



- Function: Set/Query WEB page login parameters;
- Format:
 - Query Operation
 - AT+WEBU<CR>
 - +ok=<usr,password><CR><LF><CR><LF> Set Operation
 - AT+ WEBU=< usr,password ><CR>
 - +ok<CR><LF><CR><LF>
- Parameters:
 - usr: User name for WEB page access;
 - password: Password for WEB page access;

4.2.2.14. AT+WAP

- Function: Set/Query WIFI parameters as AP;
- Format:
 - Query Operation
 - AT+WAP<CR>
 - +ok=<wifi_mode,ssid,channel><CR><LF><CR><LF>
 - Set Operation

AT+ WAP=<wifi_mode,ssid,channel><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - wifi_mode: WiFi protocols
 - ♦ 11BG
 - ♦ 11B
 - ♦ 11G
 - ♦ 11BGN
 - ♦ 11N
 - ssid: SSID when module works as AP;
 - channel: WIFI channel selection
 - ♦ AUTO
 - \diamond CH1~CH11

This Instruction only effective for HF-A11 works as AP. After HF-A11 module boots up again, the setting will be effective. But user can set this command when module configured as STA.

4.2.2.15. AT+WAKEY

- Function: Set/Query WIFI security parameters as AP;
- Format:
 - Query Operation
 - AT+WAKEY<CR>

+ok=<auth,encry,key><CR><LF><CR><LF>

Set Operation

AT+ WAKEY=< auth,encry,key><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - auth: Authentication mode
 - ♦ OPEN
 - ♦ SHARED
 - ♦ WPAPSK
 - encry:Encryption algorithm
 - ♦ NONE: When "auth=OPEN", effective;
 - ♦ WEP: When "auth=OPEN", effective or "SHARED", effective;
 - ♦ TKIP: When "auth=WPAPSK", effective;



- ♦ TKIPAES:When "auth=WPAPSK", effective;
- key: password, ASCII code, shall less than 64 bit and greater than 8bit;

This Instruction only effective for HF-A11 works as AP. After HF-A11 module boots up again, the setting will be effective. But user can set this command when module configured as STA.

4.2.2.16. AT+HIDESSID

- Function: Set/Query hide AP's SSID;
- Format:
 - Query Operation
 AT+ HIDESSID <CR>
 +ok=<sta.><CR><LF><CR><LF>
 Set Operation
 AT+ HIDESSID=<sta><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - When Query,sta reply if module's SSID is hide;
 - ♦ On not hide SSID;
 - ♦ Off hide SSID;
 - When Set,
 - \diamond Off hide SSID;
 - \diamond On not hide SSID;

4.2.2.17. AT+MSLP

- Function: Set modules into power save mode.(Turn OFF WiFi);
- Format:
 - Query Operation
 - AT+ MSLP <CR>

+ok=<sta.><CR><LF><CR><LF>

Set Operation

AT+ MSLP=<on/off><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - When Query,sta reply if the module in sleep mode;
 - ♦ On Module not in sleep mode (WiFi ON);
 - Off Module in sleep mode(WiFi OFF);
 - When Set,
 - Off Set module to sleep mode (WiFi OFF);
 - On Set module to normal mode (WiFi ON);

When module go into sleep mode, user can input "AT+MSLP=on" to re-start the module and module go into transparent transmission mode.

4.2.2.18. AT+WSCAN

- Function: Seek AP when module works as STA mode;
- Format:
 - AT+ WSCAN<CR>

+ok=<ap_site><CR><LF><CR><LF>

- Parameters:
 - ♦ ap_site: AP searched;

4.2.2.19. AT+ TCPLK

- Function: Query if TCP link already build-up;
- Format: AT+ TCPLK<CR> +ok=<sta><CR><LF><CR><LF>



- Parameters:
 - sta.: if module already setup TCP link;
 - ♦ on: TCP link setup;
 - \diamond off: TCP link not setup;

4.2.2.20. AT + TCPDIS

- Function: Open/Cose TCP (Only TCP Client available);
- Format:
 - Query Operation

AT+TCPDIS<CR>

+ok=<sta><CR><LF><CR><LF>

Set Operation

AT+ TCPDIS=<on/off><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - sta.: set/qurey TCP link status;
 - on: TCP link availabe; When setting "on", module will connect to TCP server right away.
 - off: TCP link not availabe; when setting "off", module will disconnect with TCP server and not connect again.

4.2.2.21. AT+ WANN

- Function: Set/Query WAN setting, only effective as STA mode;
- Format:
 - Query Operation

AT+WANN<CR>

- +ok=<mode,address,mask,gateway><CR><LF><CR><LF>
 - Set Operation
- AT+ WANN=< mode,address,mask,gateway ><CR> +ok<CR><LF><CR><LF>
- Parameters:
 - mode: IP setting for WAN port
 - ♦ static: Static IP
 - ♦ DHCP: Dynamic IP
 - address: WAN port IP address;
 - mask: WAN port subnet mask;
 - gateway: WAN port gateway address;

This Instruction only effective for HF-A11 works as STA. After HF-A11 module boots up again, the setting will be effective. But user can set this command when module configured as AP.

4.2.2.22. AT+ LANN

- Function: Set/Query LAN setting, only effective as AP mode;
- Format:
 - Query Operation
 - AT+LANN<CR>

+ok=<address,mask ><CR><LF><CR><LF>

Set Operation

AT+ LANN=<address,mask ><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - address: LAN port IP address;
 - mask: LAN port subnet mask;

This Instruction only effective for HF-A11 works as AP. After HF-A11 module boots up again, the setting will be effective. But user can set this command when module configured as STA.



4.2.2.23. AT + DHCPDEN

- Function: Enable/Disable LAN DHCP server function;
- Format:

Query Operation
 AT+DHCPDEN<CR>
 +ok=<sta><CR><LF><CR><LF>
 Set Operation
 AT+ DHCPDEN=<sat><CR>
 +ok<CR><LF><CR><LF>

- Parameters:
 - sta. if Enable/Disable LAN DHCP server function;
 - \diamond on: Enable LAN DHCP server function.
 - ♦ off: Disable LAN DHCP server function.

4.2.2.24. AT+ DHCPGW

- Function: Set/Query DHCP gateway address;
- Format:
 - Query Operation
 - AT+ DHCPGW<CR>
 - +ok=<address><CR><LF><CR><LF>
 - Set Operation
 - AT+ DHCPGW=<address ><CR> +ok<CR><LF><CR><LF>
- Parameters:
 - address: DHCP gate address;
- 4.2.2.25. AT+ TCPTO
 - Function: Set/Query TCP timeout;
 - Format:
 - Query Operation
 - AT+ TCPTO<CR>
 - +ok=<time><CR><LF><CR><LF>
 - Set Operation
 - AT+ TCPTO=<time ><CR>
 - +ok<CR><LF><CR><LF>
 - Parameters:
 - time: TCP timeout time.

 - \Rightarrow >=0, (0 means no timeout);
 - ♦ Default, 300s;

4.2.2.26. AT+ MAXSK

- Function: Set/Query maxima TCP connection;
- Format:
 - Query Operation
 - AT+ MAXSK<CR>

+ok=<num><CR><LF><CR><LF>

Set Operation

AT+ MAXSK =<num ><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - num: 1~32, default 32. maxima TCP connection;

When configure as TCP/Server, HF-A11 support maxime 32 TCP connections. If not require so much connection, user can resetting this parameters.



4.2.2.27. AT+TCPB

- Function: Open/Close TCPB function;
- Format:
 Query Operation
 AT+TCPB<CR>
 +ok=<sta><CR><LF><CR><LF>

♦ Set Operation

▲ Set Operation
AT+ TCPB=<on/off><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - sta: TCPB enable status
 - ♦ on, TCPB enable
 - ♦ off, TCPB disable

After HF-A11 module boots up again, the setting will be effective.

4.2.2.28. AT+TCPPTB

- Function: Set/Query TCPB port number;
- Format:

Query Operation

AT+TCPPTB<CR>

+ok=<port><CR><LF><CR><LF>

Set Operation

AT+ TCPB=<port><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - port: decimal ,<65535

After HF-A11 module boots up again, the setting will be effective.

4.2.2.29. AT+TCPADDB

- Function: Set/Query TCPB server address;
- Format:
 - Query Operation

AT+TCPADDB<CR>

+ok=<add><CR><LF><CR><LF>

- Set Operation
- AT+ TCPADDB=<add><CR>
- +ok<CR><LF><CR><LF>
- Parameters:
 - ◆ add: TCPB server address, can be IP address or url.

After HF-A11 module boots up again, the setting will be effective

4.2.2.30. AT+TCPTOB

- Function: Set/Query TCPB time out time;
- Format:

Query Operation

AT+TCPTOB<CR>

+ok=<time><CR><LF><CR><LF>

- Set Operation
- AT+ TCPTOB=<time><CR>
- +ok<CR><LF><CR><LF>
- Parameters:

time: TCPB time out time, <=600 (600s), >=0 (No time out), default 300 After HF-A11 module boots up again, the setting will be effective.



4.2.2.31. AT+TCPLKB

- Function: Query TCPB link status;
- Format: AT+TCPCKB<CR> +ok=<sta><CR><LF><CR><LF>
- Parameters:
 - sta: TCPB link status
 - ♦ on, TCPB link OK
 - ♦ off, TCPB link not availabe

4.2.2.32. AT+EPHY

- Function: Enable ETH interface;
- Format:

Set Operation

AT+ EPHY=<CR>

+ok<CR><LF><CR><LF>

Ethenet port function is disabled bydefault. Input this command to enable Ethenet. This command is not saved, this means after the module reset, Ethenet is disabled by default. Input "AT+FEPHY=on" to enable Ethenet forever..

4.2.2.33. AT+STTC

- Function: Enable/Disable STA port scan function;
- Format:

Query Operation

AT+ STTC<CR>

+ok=<sta><CR><LF><CR><LF>

Set Operation

AT+ STTC=<on/off><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - sta: when query, this value feedback
 - \diamond On: Enable STA port scan function;
 - ♦ Off: Disable STA port scan function;

4.2.2.34. AT+DOMAIN

- Function: Set/Query domain ofmodule webpage;
- Format:
 - Query Operation

AT+ DOMAIN<CR>

+ok=<domain><CR><LF><CR><LF> ♦ Set Operation AT+ DOMAIN=<domain><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ♦ domain: domain to acess to module webpage.

4.2.2.35. AT+FRLDEN

- Function: Enable/Disable nReload pin function;
- Format:

Query Operation
 AT+ FRLDEN<CR>
 +ok=< on/off ><CR><LF><CR><LF>

Set Operation

AT+ FRLDEN=<on/off><CR>



- Parameters:
 - on/off: Enable or Disable nReload pin function.
 - \diamond On, enable nReload pin function;
 - \diamond Off, disable nReload pin function;

Notes: AT+FRLDEN is F-Setting, means restore to factory setting will not affect this command.

4.2.2.36. AT+RELD

- Function: Restore to factory default setting;
- Format: AT+ RELD<CR> +ok=rebooting...<CR><LF><CR><LF>

This command restores the module to factory default setting, and then re-starts the module.

4.2.2.37. AT+Z

- Function: Re-start module;
- Format:
- AT+ Z<CR>

4.2.2.38. AT+MID

- Function: Query module ID information;
- Format:
 - Query Operation

AT+MID<CR>

- +ok=<module_id><CR><LF><CR><LF>
- Parameters:
 - module_id: Module ID information;

4.2.2.39. AT+WRMID

- Function: Set module ID information;
- Format:
 - Set Operation
 AT+WRMID=<module_id><CR>
 - +ok<CR><LF><CR><LF>
- Parameters:
 - module_id: Module ID information;

4.2.2.40. AT+VER

- Function: Query module software version information;
- Format:
 - Query Operation
 - AT+VER<CR>
 - +ok=<ver><CR><LF><CR><LF>
- Parameters:
 - ver: Module software version information;

4.2.2.41. AT+H

- Function: Help;
- Format:
 - Query Operation
 - AT+H<CR>
 - +ok=<commod help><CR><LF><CR><LF>
- Parameters:



commod help: command introduction;

4.2.2.42. AT+FVEW

- Function: Enable/Disable Ethernet WANN mode. It's valid only if restore to factory setting.;
- Format:

Query Operation
 AT+ FVEW<CR>
 +ok=<status><CR><LF><CR><LF>
 Set Operation
 AT+ FVEW=<status><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - status: Enable or Disable Ethernet WANN mode..
 - \diamond enable, enable Ethernet WANN mode;
 - disable, disable Ethernet WANN mode, then it works in Ethernet LANN mode. (default mode)

If Ethernet WANN mode is valid. Then wireless connecting router in STA mode is invalid. It only support connecting to router by Ethernet..

4.2.2.43. AT+FVER

- Function: Set/Query module working mode;
- Format:

Query Operation

AT+ FVER<CR>

+ok=<status><CR><LF><CR><LF>

- Set Operation
- AT+ FVER=<n/z><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - status: module working mode..
 - h: router mode.(default mode)
 - ♦ z: bridge mode.

4.2.2.44. AT+WMAC

- Function: Set/Query module MAC address;
- Format:
 - Query Operation

AT+ WMAC<CR>

+ok=<address><CR><LF><CR><LF> ♦ Set Operation

AT+ WMAC=<address><CR>

- +ok<CR><LF><CR><LF>
- Parameters:
 - address: module MAC address in AP mode.

The module's STA MAC address is AP's MAC address plus 1. For example, AP address: ACCF23208888, then STA address: ACCF23208889.

4.2.2.45. AT+PING

- Function: PING command;
- Format:
- Set Operation
 AT+ PING=<address><CR>
 +ok=<status><CR><LF><CR><LF>
- Parameters:



- address: target IP address. Status:command result. ♦
- ٠

5. PACKAGE INFORMATION

5.1 Shipping Information



BOX Size: 370*270*160 mm(inside)

ΉŦ





Note:

1 tray = 100pcs 1 box = 4 trays = 4 * 100 pcs = 400pcs



APPENDIX A: QUESTIONS AND ANSWERS

Q1: How to configure transparent serial port application (TCP protocol) with two HF-A11 modules?

- Network structure as below figure:
 - Module 1# Setting:
 - ♦ Works as AP mode; --See "Mode Selection Page"
 - ♦ LAN IP address: 10.10.100.254; --See "AP Interface Setting Page"
 - Network Protocal:TCP/Server, Port ID: 8899; -- See "Application Setting Page" (Module default setting);
 - Module 2# Setting:
 - ♦ Works as STA mode; --See "Mode Selection Page"
 - ♦ WAN connection type: DHCP or Static IP (For this example:10.10.100.100)
 - --See "STA Interface Setting Page"
 - Network Protocal:TCP/Client, Port ID: 8899; Application IP address: Module 1#'s LAN IP address (10.10.100.254); --- See "Application Setting Page"
 - Notes: When module 2# works as STA mode, module's WiFi interface works as WAN port. Module's WAN IP address and LAN IP address shall be setting different segment. So, module 2#'s LAN IP address must change to other segment; (For this sample, we change to 10.10.99.254); --See "AP Interface Setting Page"



Figure 42. Configure Transparent Serial Port Connection (TCP)

Q2: Where to Set HF-A11 Module LAN IP and WAN IP through Web Page?

> HF-A11 Wireless LAN IP address setting see "AP Interface Setting Page" as below Figure,

	LAN Setup			
	IP Address	10.10.254		
	Subnet Mask	255.255.255.0		
	MAC Address	88:8B:5D:70:04:87		
DHCP Туре		Server 💌		
	Default DHCP Gateway	10.10.100.254		
	Apply	Cancel		



Figure 43. Module LAN IP Setting

HF-A11 Wireless WAN IP address setting see "STA Interface Setting Page" as below Figure, User can set WAN connection type to DHCP and STATIC IP.

	WAN Connection Type:	ļ	STATIC (fixed IP)
5	Static Mode			
0	IP Address	10.10.99.254		
Subnet Mask Default Gateway		255.255.0.0		
		10.10.99.254		
	Appl	y (Cancel	

Figure 44. Module WAN IP Setting

Q3: How to configure transparent serial port application (UDP protocol) with two HF-A11 modules?

- > Network structure as below figure:
 - Module 1# Setting:
 - ♦ Works as AP mode; --See "Mode Selection Page"
 - ♦ LAN IP address: 10.10.100.254; --See "AP Interface Setting Page"
 - Network Protocal:UDP, Port ID: 8899; Application IP address:10.10.100.100;
 -- See "Application Setting Page"
 - Module 2# Setting:
 - ♦ Works as STA mode; --See "Mode Selection Page"
 - ♦ WAN connection type: Static IP (10.10.100.100)

--See "STA Interface Setting Page"

- Network Protocal:UDP, Port ID: 8899; Application IP address: Module 1#'s LAN IP address (10.10.100.254);
 -- See "Application Setting Page"
- ♦ LAN IP address: 10.10.99.254 (Different net segment with WAN port)

--See "AP Interface Setting Page"





Q4: Where to set HF-A11 module network protocol (TCP/UDP)?

- > HF-A11 network protocol setting see "Application Setting Page" as below Figure,
 - Protocol: TCP Server

Shanghai High-Flying Electronics Technology Co., Ltd (www.hi-flying.com)



♦ Only Port ID required: 8899 (Default)

Net Setting	
Mode	Server 💌
Protocol	TCP
Port	8899
IP Address	10.10.100
TCP Time out (MAX 600 s)	300
Apply Cancel	



- Protocol: TCP Client
 - ♦ Application IP address required: it's target TCP server 's IP address;
 - ♦ Port ID required: 8899 (Default)

Net Setting	
Mode	Client 💌
Protocol	TCP -
Port	8899
IP Address	10.10.100
TCP Time out (MAX 600 s)	300
Apply Cancel	

Figure 47. Module Network Protocol: TCP/Client

- Protocol: UDP
 - ♦ No Server/Client selection required;
 - ♦ Application IP address required: it's target device 's IP address;
 - ♦ Port ID required: 8899 (Default)

Net Setting	
Mode	Client 🔽
Protocol	
Port	8899
IP Address	10.10.100

Figure 48. Module Network Protocol: UDP

Q5: How to configure transparent serial port application: Two HF-A11 modules all configured as STA and connection through AP?

- > Network structure as below figure:
 - Module 1# Setting: (We use HF-A11 as AP for this example)
 - ♦ Works as AP mode and all default setting;



- Module 2# Setting:
 - ♦ Works as STA mode; --See "Mode Selection Page"
 - ♦ WAN connection type: Static IP: 10.10.100.100; --See "STA Interface Setting Page"
 - ♦ Network Protocal:TCP/Server, Port ID: 8899; -- See "Application Setting Page"
 - ♦ LAN IP address: 10.10.99.254 (Different net segment with WAN port);

--See "AP Interface Setting Page"

Module 3# Setting:

∻

Works as STA mode;

- --See "Mode Selection Page"
- ♦ WAN connection type: Static IP: 10.10.100.101; --See "STA Interface Setting Page"
- Network Protocal:TCP/Client, Port ID: 8899; Application IP address: Module 2#'s WAN IP address (10.10.100.100);
 -- See "Application Setting Page"
- ♦ LAN IP address: 10.10.98.254 (Different net segment with WAN port);

--See "AP Interface Setting Page"



Figure 49. Two HF-A11 Modules Connection Through AP

Q6: How to avoid IP address confliction when apply HF-A11 module?

- The following address allocation method can avoid the IP address confliction for dynamic and static IP address mixed application.
 - Module dynamic IP address range from 100 to 200 for last IP address segment.
 - Such as default IP: 10.10.100.254. When module works as AP, the IP address module can allocate to STA is from 10.10.100.100 to 10.10.100.200;
 - So, if user needs to set static IP for dedicated STA internal network, the available IP address range can start from 10.10.100.1 to 10.10.100.99.

Q7: PC works as server, all HF-A11 modules works as data acquisition card and connect with PC, how to configure this application?

- Network structure as below figure: Three HF-A11 module setup 3 TCP links with PC server. Module 1# works as AP and all devices connect to module 1# through WiFi interface;
 - PC Setting:



- ♦ IP address: 10.10.100.100;
- ♦ Network Protocal:TCP/Server, Port ID: 8899;
- Module 1# Setting:
 - ♦ Works as AP mode;
 - ♦ LAN IP address: 10.10.100.254;
 - ♦ Network Protocal:TCP/Client, Port ID: 8899; Application IP address:10.10.100.100;
- Module 2# Setting:
 - ♦ Works as STA mode;
 - ♦ WAN connection type: Static IP: 10.10.100.101;
 - ♦ Network Protocal:TCP/Client, Port ID: 8899; Application IP address:10.10.100.100;
 - ♦ LAN IP address: 10.10.99.254 (Different net segment with WAN port);
- Module 3# Setting:
 - ♦ Works as STA mode;
 - ♦ WAN connection type: Static IP: 10.10.100.102;
 - ♦ Network Protocal:TCP/Client, Port ID: 8899; Application IP address:10.10.100.100;
 - ♦ LAN IP address: 10.10.98.254 (Different net segment with WAN port);



Figure 50. Wireless Data Acquisition Card Setting



APPENDIX B: EVB REFERENCE DESIGN





APPENDIX C: EXTERNAL POWER SHUTDOWN MODE REFERENCE DESIGN





APPENDIX D: CONTACT INFORMATION

Address: Room.511/510, Building 7, No.365, Chuanhong Road, Pudong New Area, Shanghai, China, 201202

Web: <u>www.hi-flying.com</u>

Service Online: 400-189-3108

Mail Contact: sales@hi-flying.com

For more information about HF modules, applications, and solutions, please visit our web site http://www.hi-flying.com/en/

END OF DOCUMENT

© Copyright High-Flying, May, 2011

The information disclosed herein is proprietary to High-Flying and is not to be used by or disclosed to unauthorized persons without the written consent of High-Flying. The recipient of this document shall respect the security status of the information. The master of this document is stored on an electronic database and is "write-protected" and may be altered only by authorized persons at High-Flying. Viewing of the master document electronically on electronic database ensures access to the current issue. Any other copies must be regarded as uncontrolled copies.