

HF9610

PLC Remote Control Element

User Manual

V 1.0



Overview of Characteristic

- ✧ MIPS MCU with 4MB Flash and 8MB SRAM. Run on eCos
- ✧ Support Virtual COM, Virtual Path Connect to PLC for Remote Monitor
- ✧ Support TCP/IP/Telnet /Modbus TCP Protocol
- ✧ Support RS232/RS422/RS485 to Ethernet/Wi-Fi Conversion, Serial Speed Upto 230400 bps
- ✧ Support STA/AP/AP+STA Mode
- ✧ Support Router or Bridge Network Working Mode.
- ✧ Support 10/100M Ethernet Auto-Negotiation
- ✧ Support Easy Configuration Through a Web Interface or PC IOTService Tool
- ✧ Support Security Protocol Such As TLS/AES/DES3

- ✧ **Support Web OTA Wirelss Upgrade**
- ✧ **Wide DC Input 5~36VDC**
- ✧ **Size: 95 x 65 x 25 mm (L x W x H)**

TABLE OF CONTENTS TABLE OF CONTENTS

TABLE OF CONTENTS TABLE OF CONTENTS	3
LIST OF FIGURES.....	4
LIST OF TABLES	5
1. PRODUCT OVERVIEW.....	6
1.1. General Description.....	6
1.2. Device Parameters.....	6
2. HARDWARE INTRODUCTION	8
2.1. Interface Definition	8
2.2. RS232 Interface	9
2.3. RS485 Interface	10
2.4. RS422 Interface	10
2.5. RJ45 Interface	10
2.6. Mechanical Size	11
2.7. Rail Mounting	11
3. NETWORK STRUCTURE.....	13
3.1. Wireless Network.....	13
3.1.1. AP Network	13
3.1.2. STA Wireless Network	14
3.1.3. AP+STA Wireless Network	15
3.1.4. IOTService Software	17
3.1.5. Webpage Configuration.....	18
3.2. Ethernet Interface Function	19
3.2.1. Ethernet Port with Wi-Fi	19
3.2.2. Ethernet Interface Function(Router).....	20
3.2.3. Ethernet Port Function(Bridge).....	21
4. FUNCTION DESCRIPTION	23
APPENDIX A:REFERENCES	24
A.1. Test Tools	24
A.2. Application Notes	24
APPENDIX B: CONTACT INFORMATION	25

LIST OF FIGURES

Figure 1. PLC Application	6
Figure 3. HF9610 Interface.....	8
Figure 4. RS232 Pin Defination(Male/Needle Type).....	9
Figure 5. HF9610 RS422 Connection.....	10
Figure 6. RJ45 Pin Defination.....	11
Figure 7. HF9610 Mechanical Dimension.....	11
Figure 8. HF9610 Rail	12
Figure 11. HF9610 Function Structure	13
Figure 12. General AP Network.....	14
Figure 13. STA Application.....	15
Figure 14. AP+STA Wireless Network.....	16
Figure 16. Configure Wi-Fi Parameter.....	17
Figure 17. STA Scan Parameter.....	17
Figure 18. Configure the Wi-Fi Parameter.....	18
Figure 19. STA Scan	18
Figure 20. Ethernet Interface Function	19
Figure 21. Ethernet Interface Function (Router)	20
Figure 22. Ethernet Port Function(Bridge).....	21

LIST OF TABLES

Table 1. HF9610 Technical Specifications	6
Table 2. HF9610 Interface Definition	9
Table 3. RS232 Interface.....	10
Table 4. RJ45 Interface	11

1. PRODUCT OVERVIEW

1.1. General Description

The HF9610 provides RS232/RS485/RS422 interface to Ethernet/Wi-Fi connectivity to web enable any device. It support remote monitor PLC products of different brand.

The HF9610 integrates all serial to Ethernet functionality with 95 x 65 x 25mm size.

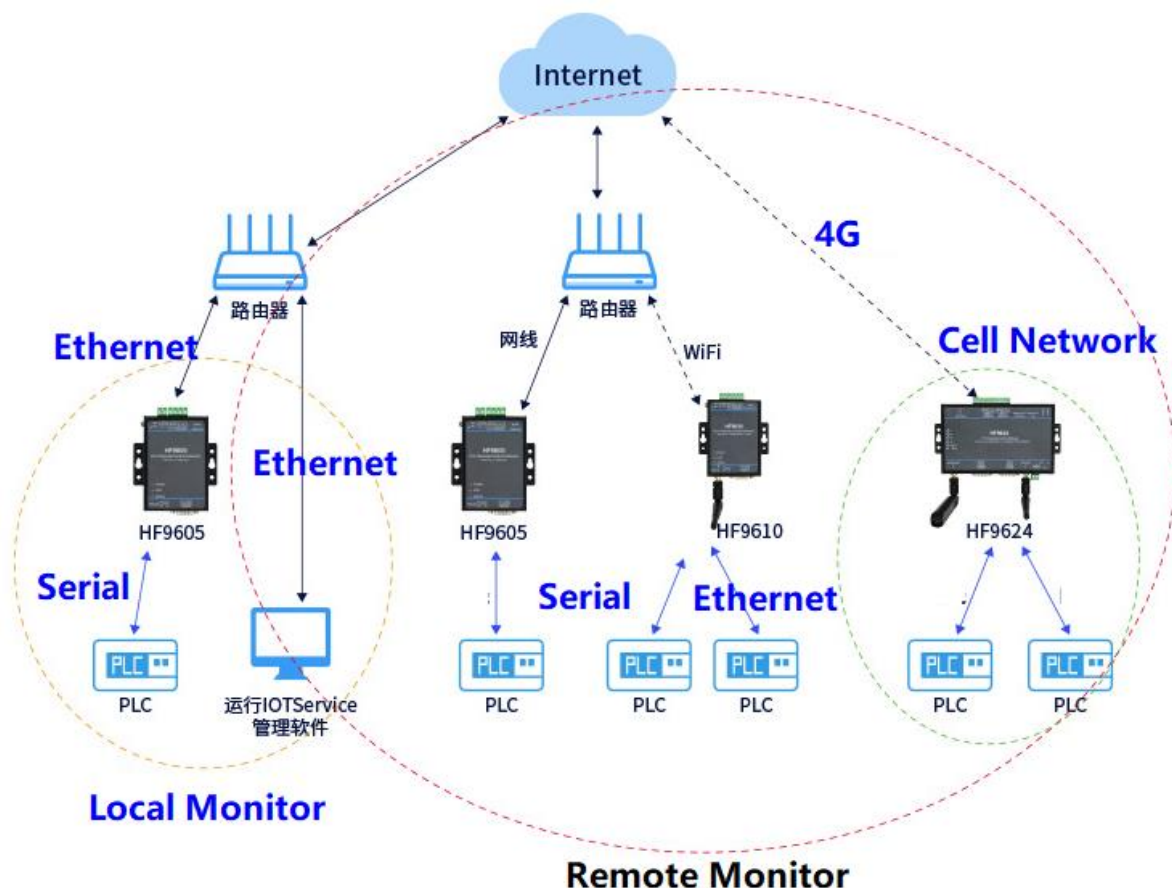


Figure 1. PLC Application

1.2. Device Parameters

Table 1. HF9610 Technical Specifications

Item	Parameters
System Information	
Processor/Frequency	MIPS/320MHz
Flash/SDRAM	4MB/8MB
Operating System	eCos
Ethernet Port	
Port Number	1 RJ45

	1 WAN/LAN switchable
Interface Standard	10/100 Base-T Auto-Negotiation
Protection	8KV Isolation
Transformer	Integrated
Network Protocol	IP, TCP, UDP, DHCP, DNS, HTTP Server/Client, ARP, BOOTP, AutoIP, ICMP, Web socket, Telnet, uPNP, NTP, Modbus TCP
Security Protocol	TLS v1.2 AES 128Bit DES3
Wi-Fi Interface	
Standard	802.11 b/g/n
Frequency	2.412GHz-2.484GHz
Network Mode	STA/AP/STA+AP
Security	WEP/WPA2PSK/WPA2PSK
Encryption	WEP64/WEP128/TKIP/ AES
Tx Power	802.11b: +20dBm (Max.) 802.11g: +18dBm (Max.) 802.11n: +15dBm (Max.)
Rx Sensitive	802.11b: -89dBm 802.11g: -81dBm 802.11n: -71dBm
Antenna	3dBi Stick Antenna
Serial Port	
Port Number	1 RS232/RS485/RS422
Interface Standard	RS232: DB9 RS485/RS422: 5.08mm connector Support one channel of RS232/RS422/RS485.
Data Bits	8
Stop Bit	1,2
Check Bit	None, Even, Odd
Baud Rate	TTL: 2400 bps~230400 bps
Flow Control	No Flow Control Hardware RTS/CTS、DSR/DTR Software Xon/ Xoff flow control
Software	
Web Pages	Http Web Configuration
Configuration	Web CLI Telnet IOTService PC Software
Firmware Upgrade	Web
Basic Parameter	
Size	95 x 65 x 25 mm
Operating Temp.	-25 ~ 85°C
Storage Temp.	-45 ~ 105°C, 5 ~ 95% RH (no condensation)
Input Voltage	5~36VDC
Working Current	~200mA
Power	<700mW

2. HARDWARE INTRODUCTION

The HF9610 unit is a complete solution for serial port device connecting to network. This powerful device supports a 10/100BASE-T Ethernet connection, a reliable and proven operating system stored in flash memory, an embedded web server, a full TCP/IP protocol stack, and standards-based (AES) encryption.

2.1. Interface Definition



Figure 3. HF9610 Interface

Table 2. HF9610 Interface Definition

Function	Name	Description
External Interface	Ethernet	10/100M Ethernet Default is WAN function in AP mode (Can be configured to LAN Function), connect to router LAN port for network access. In STA mode, it works in LAN function.
	WiFi ANT	Antenna Interface
	RS232	RS232 Communication
	RS485/RS422	RS485/RS422 Communicaton
	Earth	Protect Earth
	DC Input	DC Power 5~36V
LED Indicator	Power	Internal Power Supply Indicator On: Power is OK Off: Power is NG
	Link	Network Connection Indicator On: Include the following condition. <ul style="list-style-type: none"> ● Ethernt 2 connection OK ● Wi-Fi STA connect to AP ● Wi-Fi AP being connected by other STA device Off: No network connection
	Active	Data transfer Indicator On: Data is transferring. Off: No data transfer
Button	Reload	Restore to factory setting Long press this button for 4 seconds and loose it to restore parameters to factory setting.
Switch	Protect	Device parameter protect On: Enable protect, working parameter can not be modified. Off: Disable protect.

2.2. RS232 Interface

Device serial port is male(needle), RS232 voltage level(can connect to PC directly), Pin Order is cosistent with PC COM port. Use cross Cable connected with PC(2-3 cross, 7-8 cross, 5-5 direct, 7-8 no connection), see the following table for pin defination.



Figure 4. RS232 Pin Defination(Male/Needle Type)

Table 3. RS232 Interface

Pin Number	Name	Description
2	RXD	Receive Data
3	TXD	Send Data
5	GND	GND
7	RTS	Request to Send
8	CTS	Clear to Send

2.3. RS485 Interface

RS485 use two wire links, A(DATA+), B(DATA-). Connect A(+) to A(+), B(-) to B(-) for communication.

The RS485 interface support maximum 32 485 device, special hardware version can support max 255 device. The cable maximum length is 1200 meters. Need to add 120Ohm terminal resistor for over 300 meters.

2.4. RS422 Interface

RS422 interface use T+/T-/R+/R-, cross connect to device as the following picture.

Name	Description
TX+	Transfer Data+
TX-	Transfer Data-
RX+	Receive Data+
RX-	Receive Data-

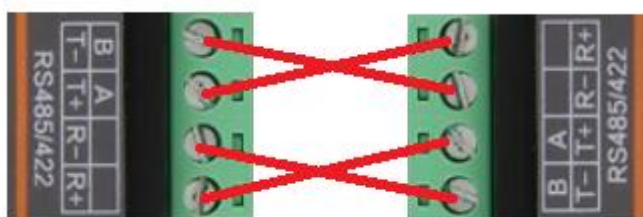


Figure 5. HF9610 RS422 Connection

2.5. RJ45 Interface

Ethernet port is 10M/100M adaptive, support AUTO MDI/MDIX which means it support direct connecting to PC with Ethernet cable.

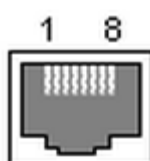


Figure 6. RJ45 Pin Defination

Table 4. RJ45 Interface

Pin Number	Name	Description
1	TX+	Transfer Data+
2	TX-	Transfer Data-
3	RX+	Receive Data+
4	PHY-VCC	Transformer Tap Voltage
5	PHY-VCC	Transformer Tap Voltage
6	RX-	Receive Data-
7	N.C.	None Connect
8	N.C.	None Connect

2.6. Mechanical Size

The dimensions of HF9610 are defined as following picture (mm):

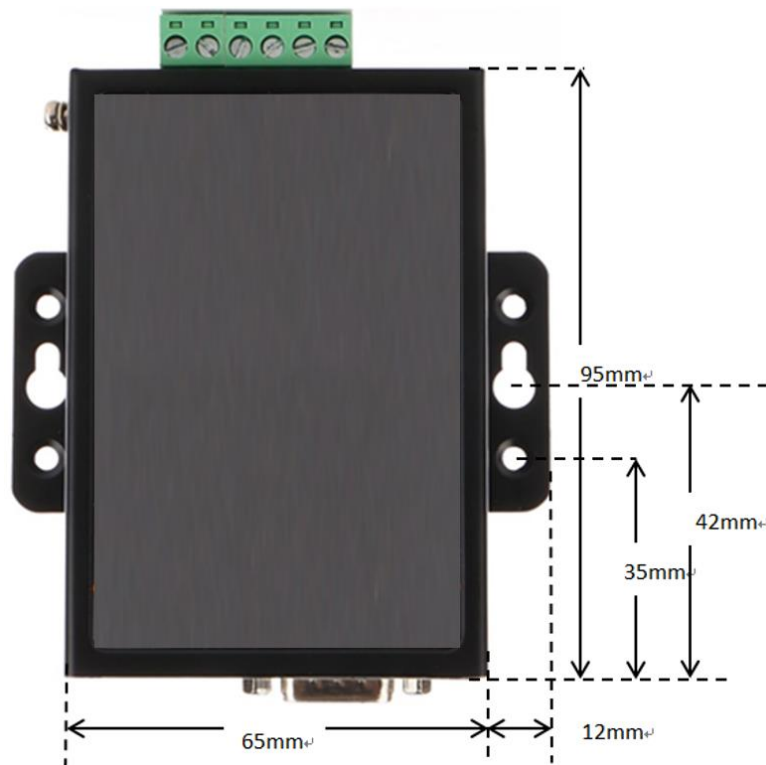


Figure 7. HF9610 Mechanical Dimension

2.7. Rail Mounting

We support to provide rail for mounting as the following picture.

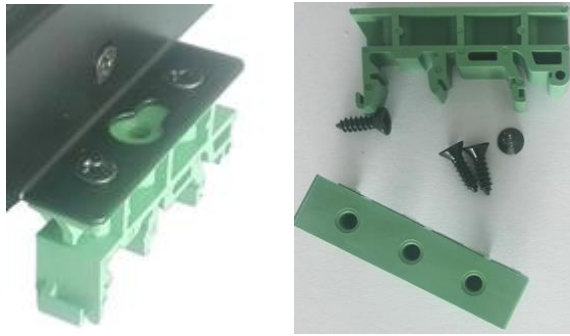


Figure 8. HF9610 Rail

3. NETWORK STRUCTURE

3.1. Wireless Network

HF9610 can be set as a wireless STA and AP as well. And logically, it supports two wireless interfaces, one is used as STA and the other is AP. Other STA devices can join into the wireless network through AP interface. So the it can provide flexible networking method and network topology. Functions is as follow:

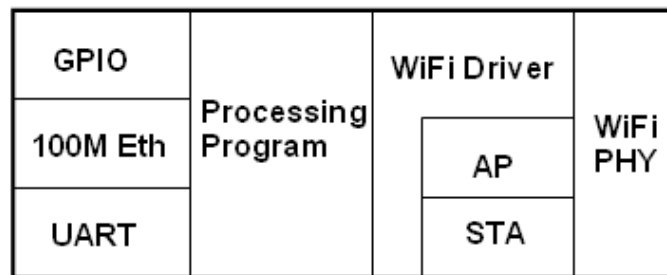


Figure 11. HF9610 Function Structure

<Introductions>

AP: Wireless access point which is the central joint. Usually, wireless router is a AP, other STA devices can connect with AP to join the network.

STA: Wireless station which is terminal of a wireless network. Such as laptop and pad etc.

3.1.1. AP Network

HF9610 can construct a wireless network as AP. All the STA devices will consider the AP as the centre of the wireless network. The mutual communication can be transponded by AP, shown as follow:



Figure 12. General AP Network

3.1.2. STA Wireless Network

Take the following picture as example. When router works in AP mode, HF9610 connects to the user' s devices by RS232/RS485 interface. In this topology, the whole wireless network can be easily stretched.

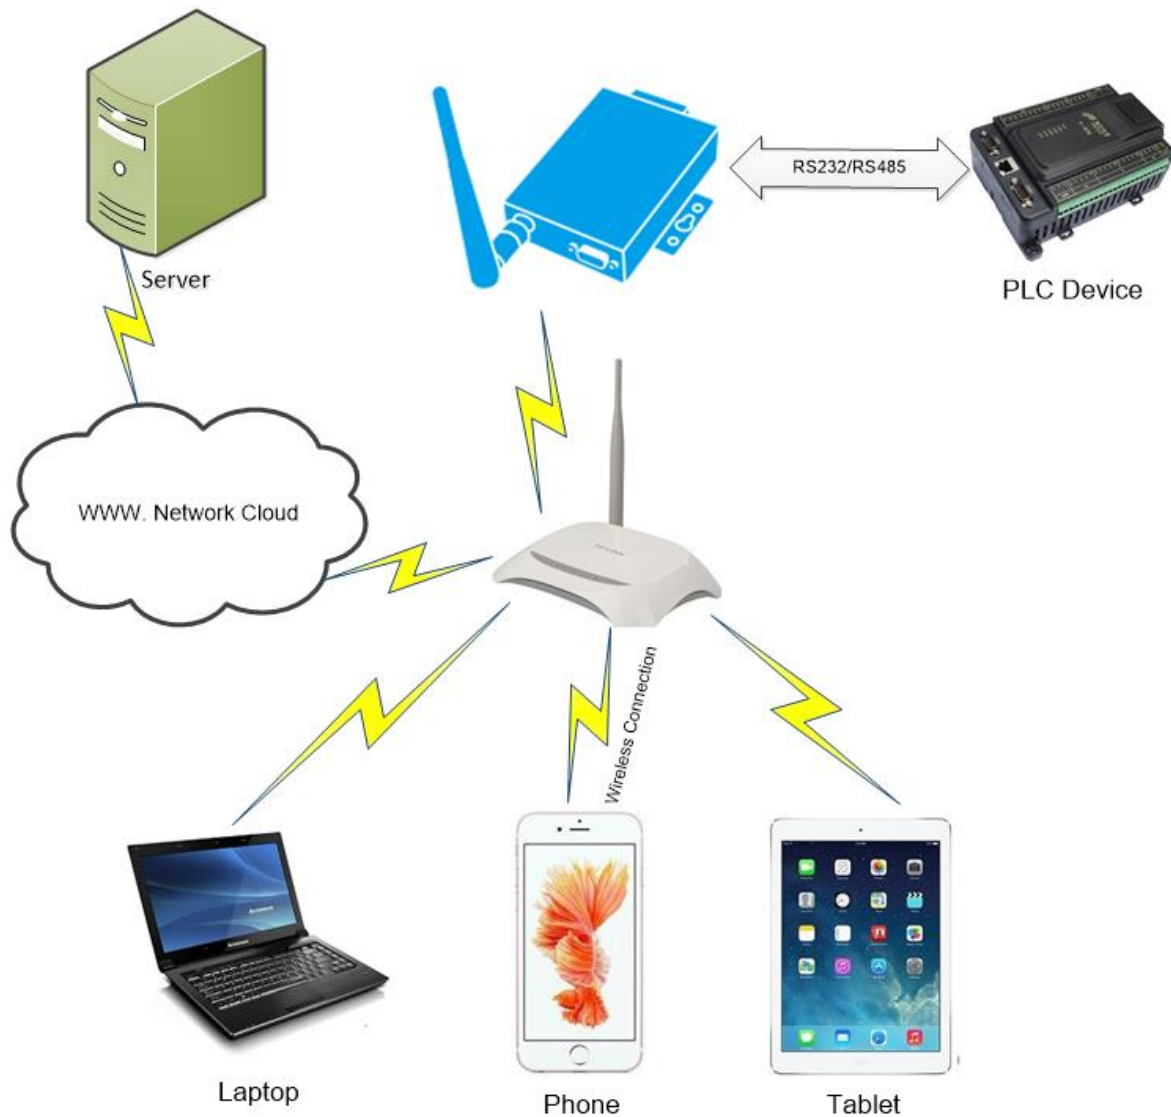


Figure 13. STA Application

3.1.3. AP+STA Wireless Network

HF9610 can support AP+STA method. It can support AP and STA interface at the same time. Shown as follow:

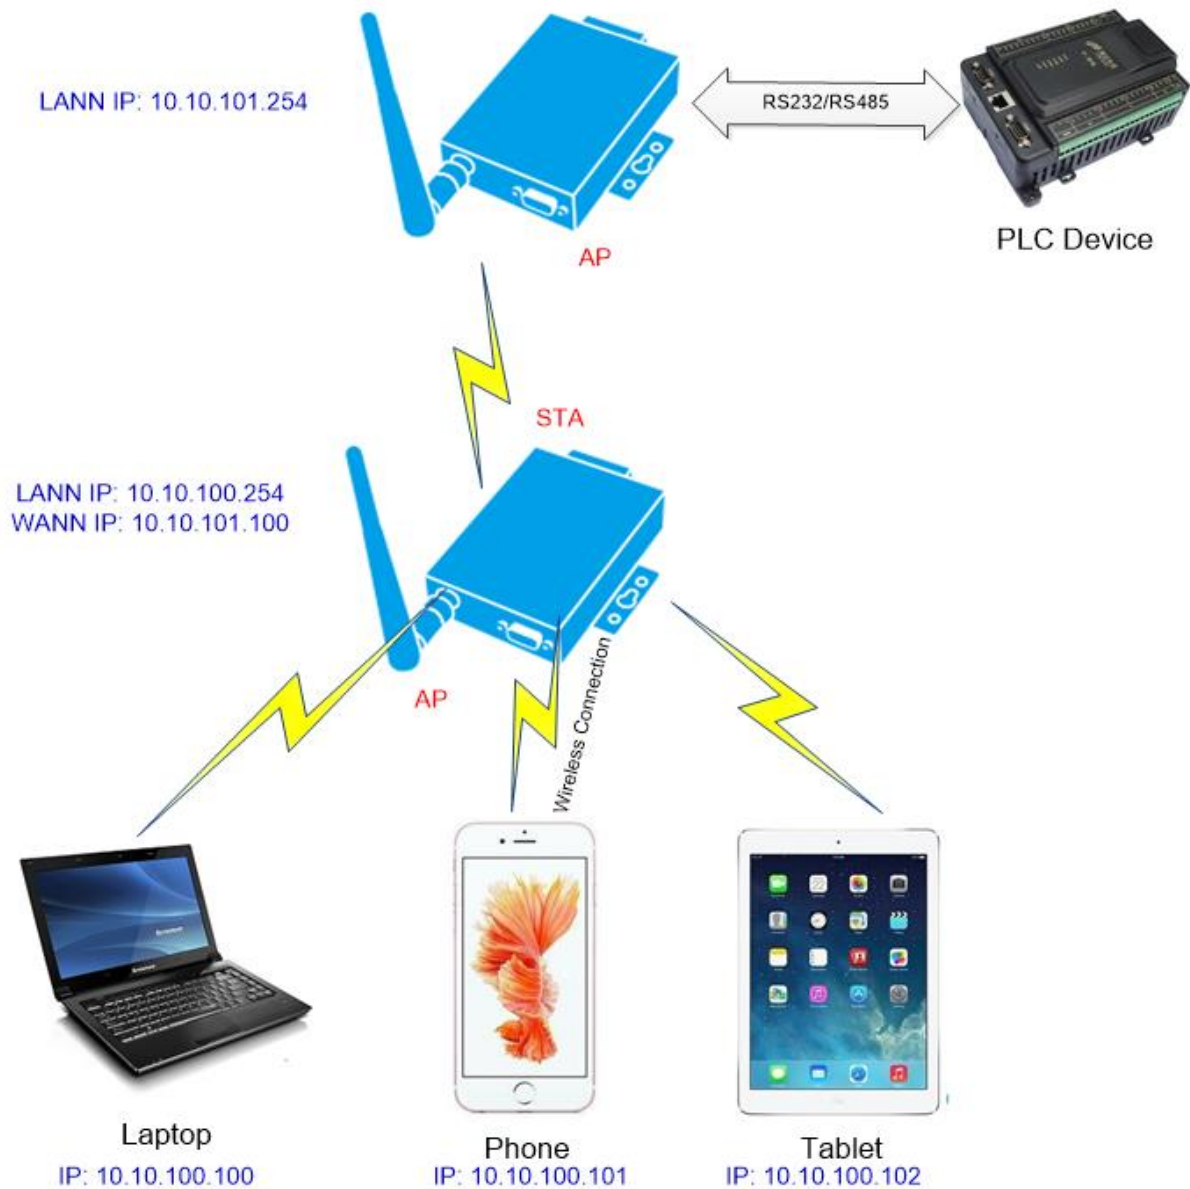


Figure 14. AP+STA Wireless Network

In this picture, HF9610 open the AP+STA function and the STA interface can be connected to the remote server by the router. Similarly, the AP interface can also be used. Phone/PAD can be connected to the AP interface and to control the serial devices or set itself.

Through AP+STA function, it is convenient to use Phone/PAD to monitor the user' s devices and not change its original settings.

Through AP+STA function, it is convenient to configure the product.And it solves the problem that the formal product can only configure by serial port.


Notes that:

When the AP+STA function is opened, the STA interface needs to connect to other router. Otherwise, STA interface will endlessly scan the router information nearby. When it is scanning, it will bring bad effects to the AP interface, like losing data etc.

AP and STA parts must set to the different sub-network for the product working as APSTA mode.

3.1.4. IOTService Software

Open the IOTService after connect to the AP hotspot generated by HF9610 or connect to Product Ethernet port to PC, then config the parameter.

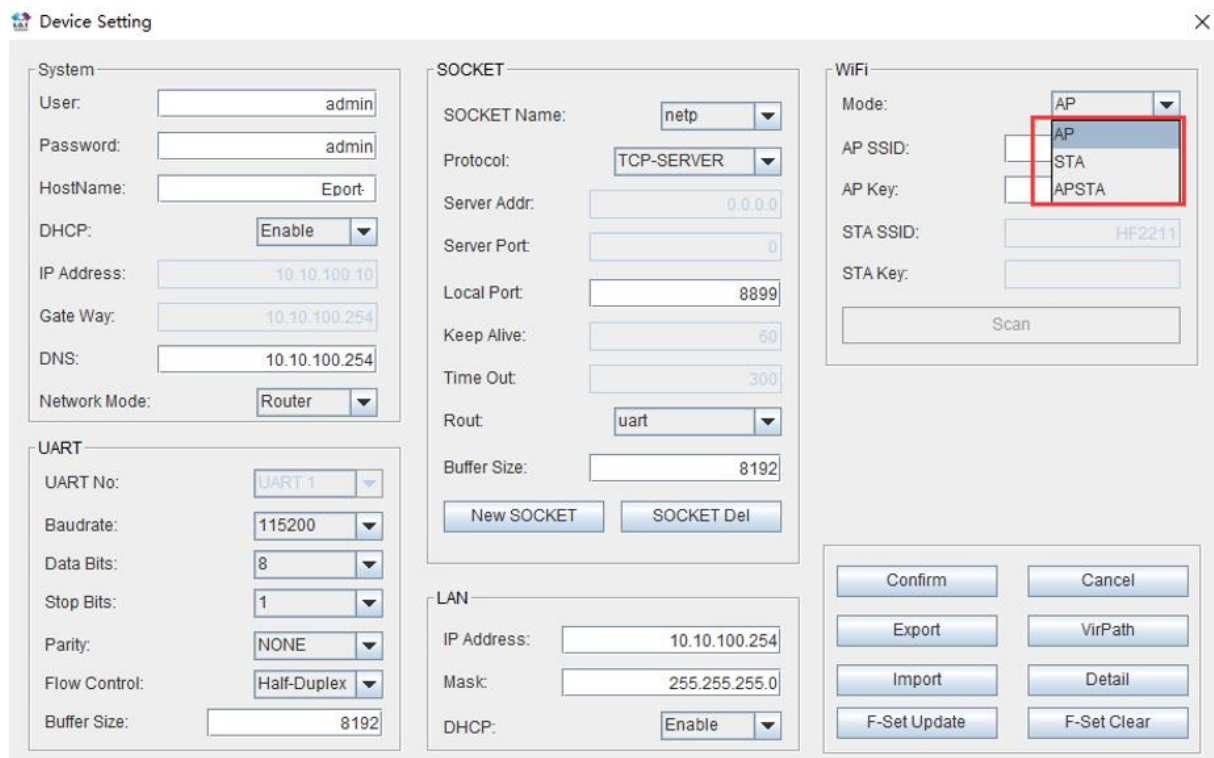


The screenshot shows the 'Device Setting' window with the 'WiFi' tab selected. The 'Mode' dropdown is highlighted with a red box, showing options: AP, STA, and APSTA. Other visible settings include:

- System:** User: admin, Password: admin, HostName: Eport, DHCP: Enable, IP Address: 10.10.100.10, Gate Way: 10.10.100.254, DNS: 10.10.100.254, Network Mode: Router.
- SOCKET:** SOCKET Name: netp, Protocol: TCP-SERVER, Server Addr: 0.0.0.0, Server Port: 0, Local Port: 8899, Keep Alive: 60, Time Out: 300, Rout: uart, Buffer Size: 8192.
- WiFi:** Mode: AP, AP SSID: (empty), AP Key: (empty), STA SSID: HF2211, STA Key: (empty), Scan button.
- UART:** UART No: UART 1, Baudrate: 115200, Data Bits: 8, Stop Bits: 1, Parity: NONE, Flow Control: Half-Duplex, Buffer Size: 8192.
- LAN:** IP Address: 10.10.100.254, Mask: 255.255.255.0, DHCP: Enable.

 Action buttons at the bottom include Confirm, Cancel, Export, VirPath, Import, Detail, F-Set Update, and F-Set Clear.

Figure 16. Configure Wi-Fi Parameter

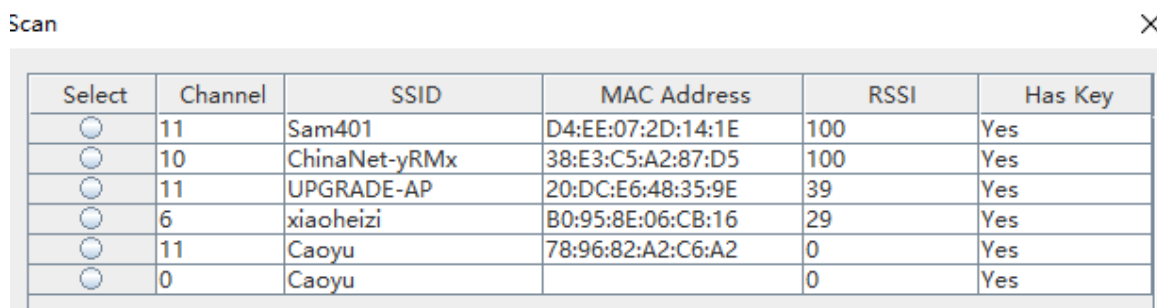


The screenshot shows the 'Scan' window with a table of detected Wi-Fi networks. The table has columns: Select, Channel, SSID, MAC Address, RSSI, and Has Key.

Select	Channel	SSID	MAC Address	RSSI	Has Key
<input type="radio"/>	11	Sam401	D4:EE:07:2D:14:1E	100	Yes
<input type="radio"/>	10	ChinaNet-yRMx	38:E3:C5:A2:87:D5	100	Yes
<input type="radio"/>	11	UPGRADE-AP	20:DC:E6:48:35:9E	39	Yes
<input type="radio"/>	6	xiaoheizi	B0:95:8E:06:CB:16	29	Yes
<input type="radio"/>	11	Caoyu	78:96:82:A2:C6:A2	0	Yes
<input type="radio"/>	0	Caoyu		0	Yes

Figure 17. STA Scan Parameter

3.1.5. Webpage Configuration

Use PC to connect with HF9610 through its AP hotspot or Ethernet connection. Input the default IP(10.10.100.254, default username and password: admin/admin) to login the webpage to configure the parameter.

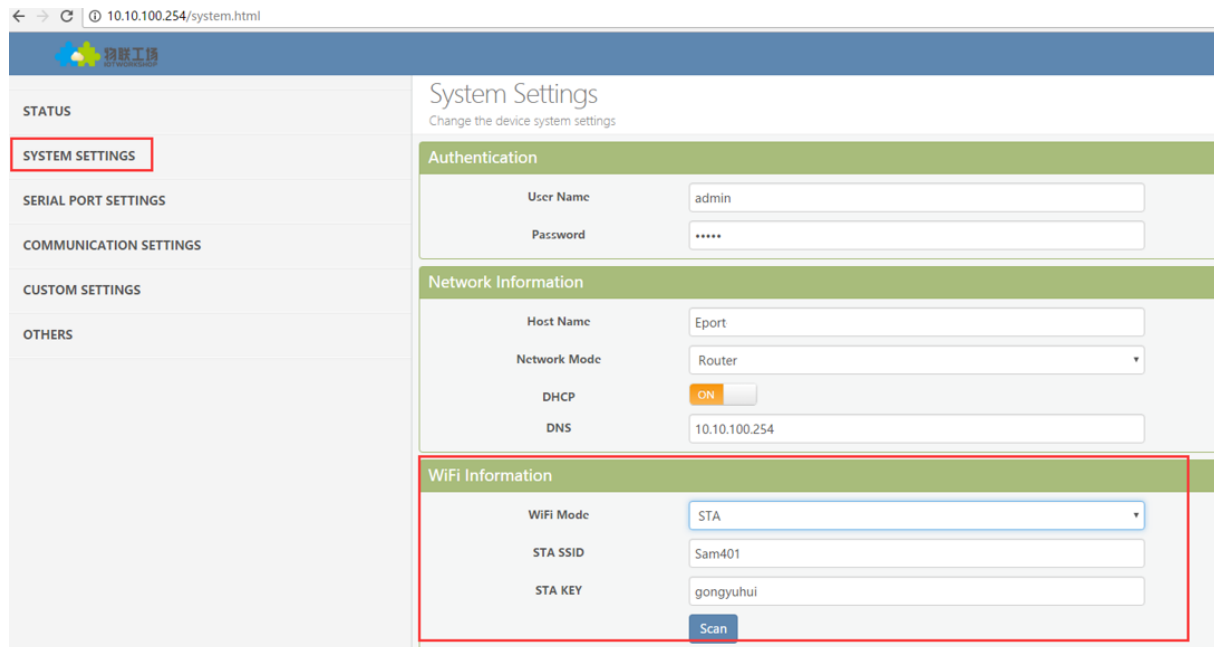

System Settings
Change the device system settings

Authentication

User Name: admin
Password: *****


Network Information

Host Name: Eport
Network Mode: Router
DHCP: ON
DNS: 10.10.100.254

WiFi Information

WiFi Mode: STA
STA SSID: Sam401
STA KEY: gongyuhui
Scan

Figure 18. Configure the Wi-Fi Parameter

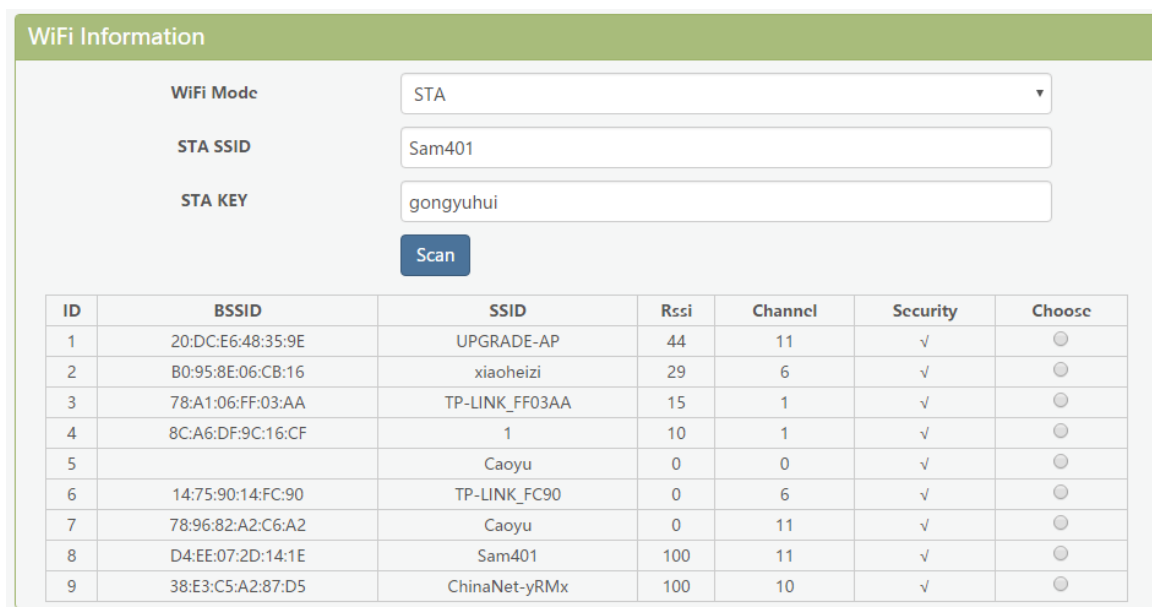

WiFi Information

WiFi Mode: STA
STA SSID: Sam401
STA KEY: gongyuhui
Scan

ID	BSSID	SSID	Rssi	Channel	Security	Choose
1	20:DC:E6:48:35:9E	UPGRADE-AP	44	11	√	<input type="radio"/>
2	B0:95:8E:06:CB:16	xiaoheizi	29	6	√	<input type="radio"/>
3	78:A1:06:FF:03:AA	TP-LINK_FF03AA	15	1	√	<input type="radio"/>
4	8C:A6:DF:9C:16:CF	1	10	1	√	<input type="radio"/>
5		Caoyu	0	0	√	<input type="radio"/>
6	14:75:90:14:FC:90	TP-LINK_FC90	0	6	√	<input type="radio"/>
7	78:96:82:A2:C6:A2	Caoyu	0	11	√	<input type="radio"/>
8	D4:EE:07:2D:14:1E	Sam401	100	11	√	<input type="radio"/>
9	38:E3:C5:A2:87:D5	ChinaNet-yRMx	100	10	√	<input checked="" type="radio"/>

Figure 19. STA Scan

3.2. Ethernet Interface Function

HF9610 provides with a 100M Ethernet interface. Through the 100M Ethernet interface, user can achieve the connection among WIFI, serial port and Ethernet port.

3.2.1. Ethernet Port with Wi-Fi

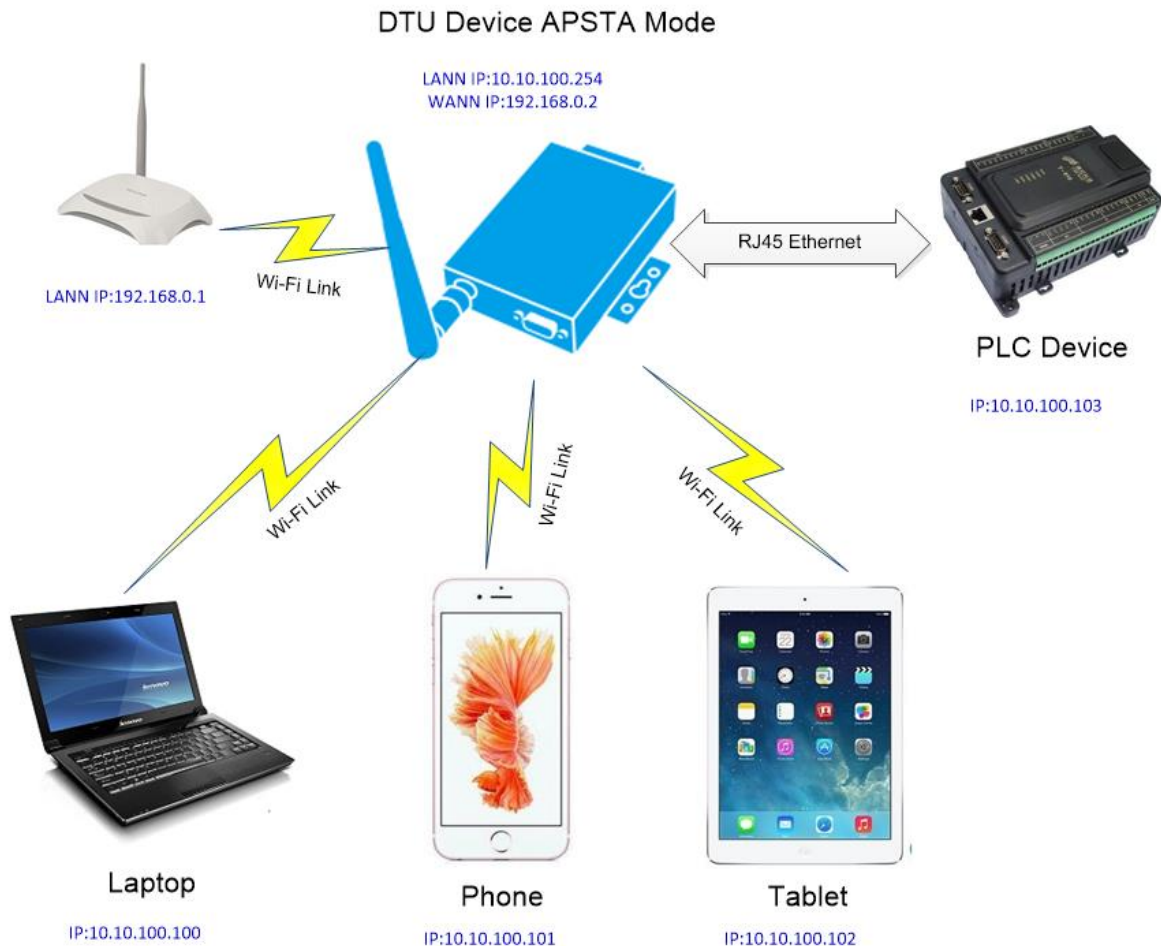


Figure 20. Ethernet Interface Function

HF9610 servers as APSTA and generate a central network. The IP addresses of all the devices and module's are in the same network segment.

Note:

If product works in AP mode, then the Ethernet is working as WAN mode, PC will use Auto-IP to set its IP when connect via Ethernet. Better to change via Wi-Fi, then the PC and other devices are all in same subnetwork.(10.10.100.xxx)

SN	DevType	MAC Address	HostName	IP	Position	VirPath	State	SW Ver
1		F0FE6B5373...	Eport	169.254.173.207	Local		Online	1.09j


```

C:\WINDOWS\system32\cmd.exe
Windows IP 配置

以太网适配器 以太网:

    连接特定的 DNS 后缀 . . . . . : 
    本地链接 IPv6 地址 . . . . . : fe80::b873:7689:f33e:5775%2
    自动配置 IPv4 地址 . . . . . : 169.254.87.117
  
```

3.2.2. Ethernet Interface Function(Router)


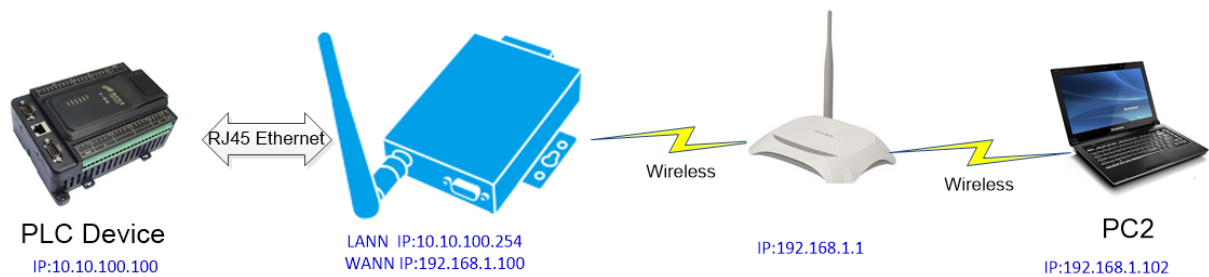


Figure 21. Ethernet Interface Function (Router)

The HF9610 device Ethernet interface work in router mode. When connect to router, it will get IP address from router (as picture 192.168.1.100). The product itself generate a subnet(10.10.100.254 default). The device from the Ethernet interface is assigned with IP address by module (10.10.100.101). Then the device and the PC1 are in the same subnet for network communication. A connection from PC1 to PC2, but PC2 cannot actively connect to PC1.

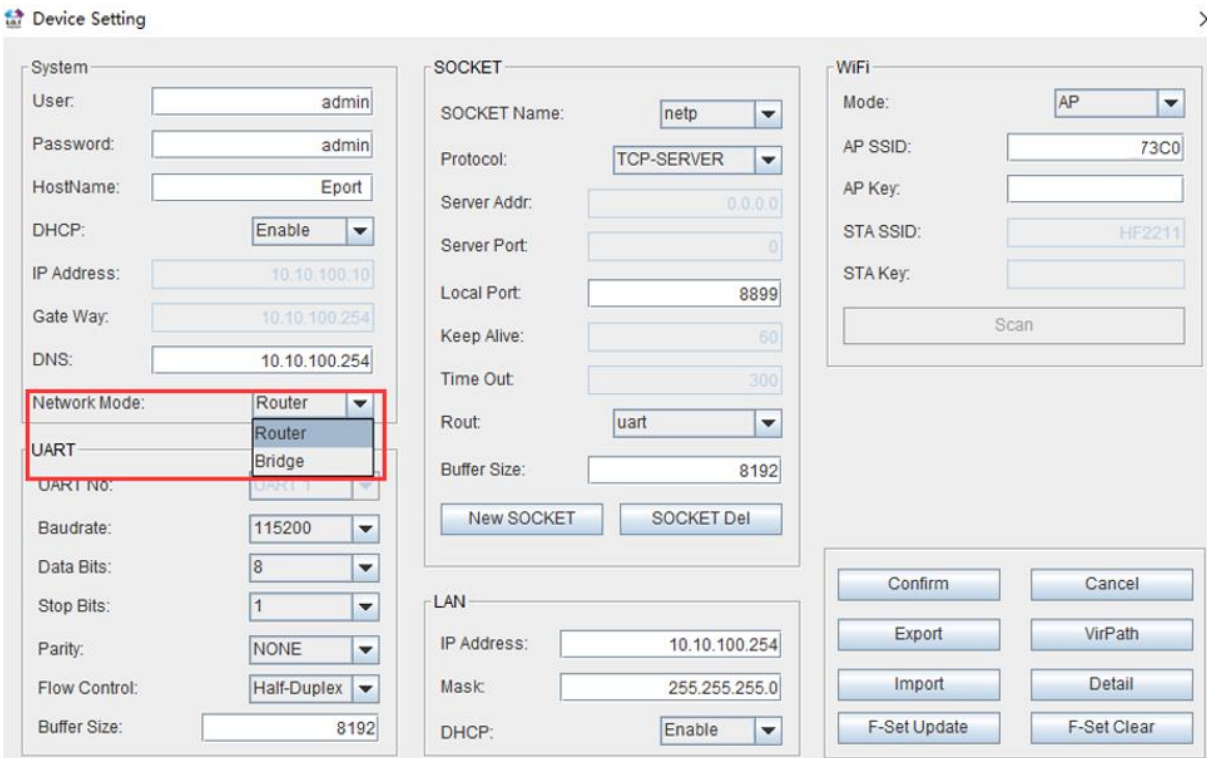

Device Setting

System

User: admin

Password: admin

HostName: Eport

DHCP: Enable

IP Address: 10.10.100.10

Gate Way: 10.10.100.254

DNS: 10.10.100.254

Network Mode: Router

UART: Router

UART No.: UART1

Baudrate: 115200

Data Bits: 8

Stop Bits: 1

Parity: NONE

Flow Control: Half-Duplex

Buffer Size: 8192

SOCKET

SOCKET Name: netp

Protocol: TCP-SERVER

Server Addr: 0.0.0.0

Server Port: 0

Local Port: 8899

Keep Alive: 60

Time Out: 300

Rout: uart

Buffer Size: 8192

New SOCKET

SOCKET Del

LAN

IP Address: 10.10.100.254

Mask: 255.255.255.0

DHCP: Enable

WiFi

Mode: AP

AP SSID: 73C0

AP Key:

STA SSID: HF2211

STA Key:

Scan

Confirm

Cancel

Export


VirPath

Import

Detail

F-Set Update

F-Set Clear

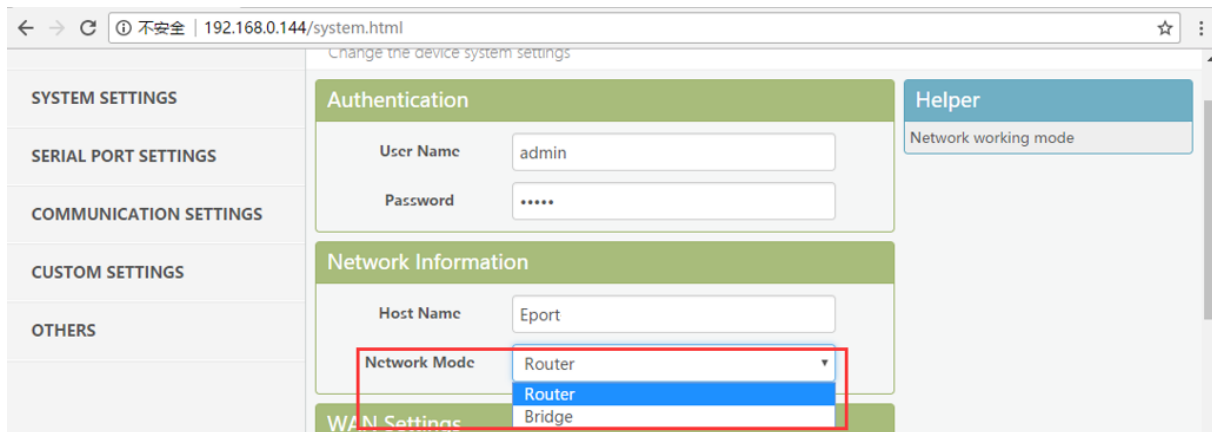

3.2.3. Ethernet Port Function(Bridge)

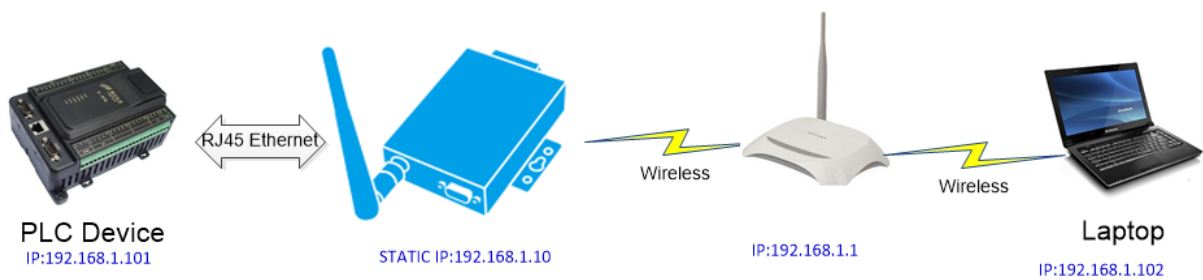


Figure 22. Ethernet Port Function(Bridge)

The HF9610 device Ethernet interface work in router mode. When connect to router, it will get IP address from router(as picture 192.168.1.101). AT the whole network, the product is like an invisible device. PC1 ad PC2 can communicated mutually without any constraint. But if product needs to connect with other devices, it needs set LAN IP address(192.168.1.10 as picture)

Notes:

Webpage, IOTService, or Cli command to set working mode, by default is router mode. **It need reboot when change its working mode.**

Device Setting

System

User: admin

Password: admin

HostName: Eport-

DHCP: Disable

IP Address: 10.10.100.10

Gate Way: 10.10.100.254

DNS: 10.10.100.254

Network Mode: Bridge

UART

UART No: UART 1

Baudrate: 115200

Data Bits: 8

Stop Bits: 1

Parity: NONE

Flow Control: Half-Duplex

Buffer Size: 8192

SOCKET

SOCKET Name: netp

Protocol: TCP-SERVER

Server Addr: 0.0.0.0

Server Port: 0

Local Port: 8899

Keep Alive: 60

Time Out: 300

Rout: uart

Buffer Size: 8192

New SOCKET SOCKET Del

WiFi

Mode: STA

AP SSID: _73C0

AP Key:

STA SSID: UPGRADE-AP_aaaa

STA Key: 12345678

Scan

LAN

IP Address: 192.168.1.10

Mask: 255.255.255.0

DHCP: Enable

Confirm Cancel

Export VirPath

Import Detail

F-Set Update F-Set Clear

4. FUNCTION DESCRIPTION

Refer to “IOT_Device_Series_Software_Funtion” document for more detailed function.

APPENDIX A:REFERENCES

A.1. Test Tools

IOTService Configure Software:

<http://www.hi-flying.com/download-center-1/applications-1/download-item-iot-service>

UART、Network Test software:

http://www.hi-flying.com/index.php?route=download/category&path=1_4

A.2. Application Notes

http://www.hi-flying.com/index.php?route=download/category&path=1_7

APPENDIX B: CONTACT INFORMATION

Address: Room 1002,Building 1,No.3000,Longdong Avenue,Pudong New
Area,Shanghai,China,201203

Web: www.iotworkshop.com or www.hi-flying.com

Contact:

Sales: sales@iotworkshop.com

Support: support@iotworkshop.com

Service: service@iotworkshop.com

Business: business@iotworkshop.com

For more information about IOTworkshop modules, applications, and solutions, please visit our web
site www.iotworkshop.com

<END OF DOCUMENT>